



(GMP Version)
IMPORTANT



Be Sure
to Read this
Manual
Before Use



UNIS TECHNOLOGY

Operation Manual

WE ARE HERE TO ASSIST For parts and service



Have Questions? Contact us!

UNIS SERVICE CENTER

Tel: 972-241-4263

Email: service@unispartsandservice.com

www.unispartsandservice.com

When contacting Service, you will need the following information
and the name of your authorized distributor.

INDOOR MACHINE	
NAME: Bigfoot Smash GMP	MAX POWER: 680W
MODEL: C-805	MIN POWER: 500W
S/N:	FREQUENCY: 50/60Hz
VOLTAGE: AC110V~	DATE:
Guangdong UNIS Technology Co.,Ltd.	

INDOOR MACHINE	
NAME: Bigfoot Smash GMP	MAX POWER: 680W
MODEL: C-805	MIN POWER: 500W
S/N:	FREQUENCY: 50/60Hz
VOLTAGE: AC220V~	DATE:
Guangdong UNIS Technology Co.,Ltd.	



CONTENT

IMPORTANT SAFETY INSTRUCTIONS	3
1. SPECIFICATIONS	5
2. CONTENTS OF THE ACCESSORY KIT	6
3. PART NAME	7
4. SET UP & INSTALLATION	8
5. HOW TO PLAY	14
6. GAME OPTION	17
7. TROUBLESHOOTINGS	21
8. MAINTENANCE & INSPECTION	24
9. OVERALL CONSTRUCTION	25
10. WIRING DIAGRAM	44

Thank you for purchasing **Bigfoot Smash GMP**. We hope you enjoy the product.

This manual contains valuable information about how to operate and maintain your game machine properly and safely. It is intended for the owner and/or personnel in charge of product operation. Carefully read and understand the instructions.

If you need any help during installation and setup please utilize this manual and troubleshooting guide. If the product fails to function properly, *non-technical personnel should under no circumstance attempt to service the machine*. Contact your distributor or manufacturer for help.

Before use, please read **IMPORTANT SAFETY INSTRUCTIONS**.

IMPORTANT SAFETY INSTRUCTIONS

To ensure the safe usage of this product, carefully read and understand these instructions before operating your game.

Save these instructions for future reference.

Use this product only as described in this manual. Other uses not recommended may cause fire, electric shock or personal injury. Unplug the game from the outlet when not in use, when moving from one location to another, and before cleaning/servicing.

Explanations which require special attention are indicated by signs of warning. Depending on the potential hazardous degree, the terms: **NOTE**, **NOTICE**, and **WARNING** are used.

NOTE: A NOTE indicates useful hints or information about product usage.

NOTICE: A NOTICE indicates potential damage to product and how to avoid the problem.

WARNING: A WARNING indicates a potential for product damage or serious personal injury.

It is important to understand the meaning of the following HAZARD SIGNS before continuing:

High Voltage and Shock Hazard:

High voltage can cause electric shock.
Turn off/unplug power before servicing.



High Temperature Hazard:

This part may cause scalding.
Do not touch. Surface may be hot.



No Touching Hazard:

This part may be hot or can cause electric shock.
Do not touch.



Use the following safety guidelines to help ensure your own personal safety and to help protect your equipment and surrounding environment from potential damage.

⚠️ This product is an indoor game machine. Do not install outdoors.

Avoid installing in the following places to prevent fire, electric shock, injury and/or machine malfunctioning:

- Places subject to rain/moisture, or places subject to high humidity.
- Places subject to direct sunlight, or places subject to extremely hot or cold temperatures to ensure that it is used within the specified operating range.
- Places where inflammable gas may be present or in the vicinity of highly inflammable/volatile chemicals or items that can easily catch fire.
- On unstable or sloped surfaces. The machine may topple or cause unforeseen accidents.
- Vicinity of fire exits, fire extinguishers etc that may block/prevent safety measures.

IMPORTANT NOTE:

ALL REPAIRS MUST BE DONE TO ORIGINAL MANUFACTURER SPECIFICATIONS. FAILURE TO DO SO VOID ALL WARRANTIES AND OPERATOR ASSUMES ALL RISKS.

Note: The contents of this manual may be updated without notice.

1. SPECIFICATIONS

Rated power supply: AC110V 50/60Hz; AC220V 50/60Hz;

Min. Power consumption: 500W

Max. Power consumption: 680W


Dimension: H96.61×W70.86×D75.00 in

H2454.1×W1800 ×D1905 mm

Model No: C-805

Part No.: B148

! NOTICE : After turning off the game, please wait at least 1 minute before restarting again.

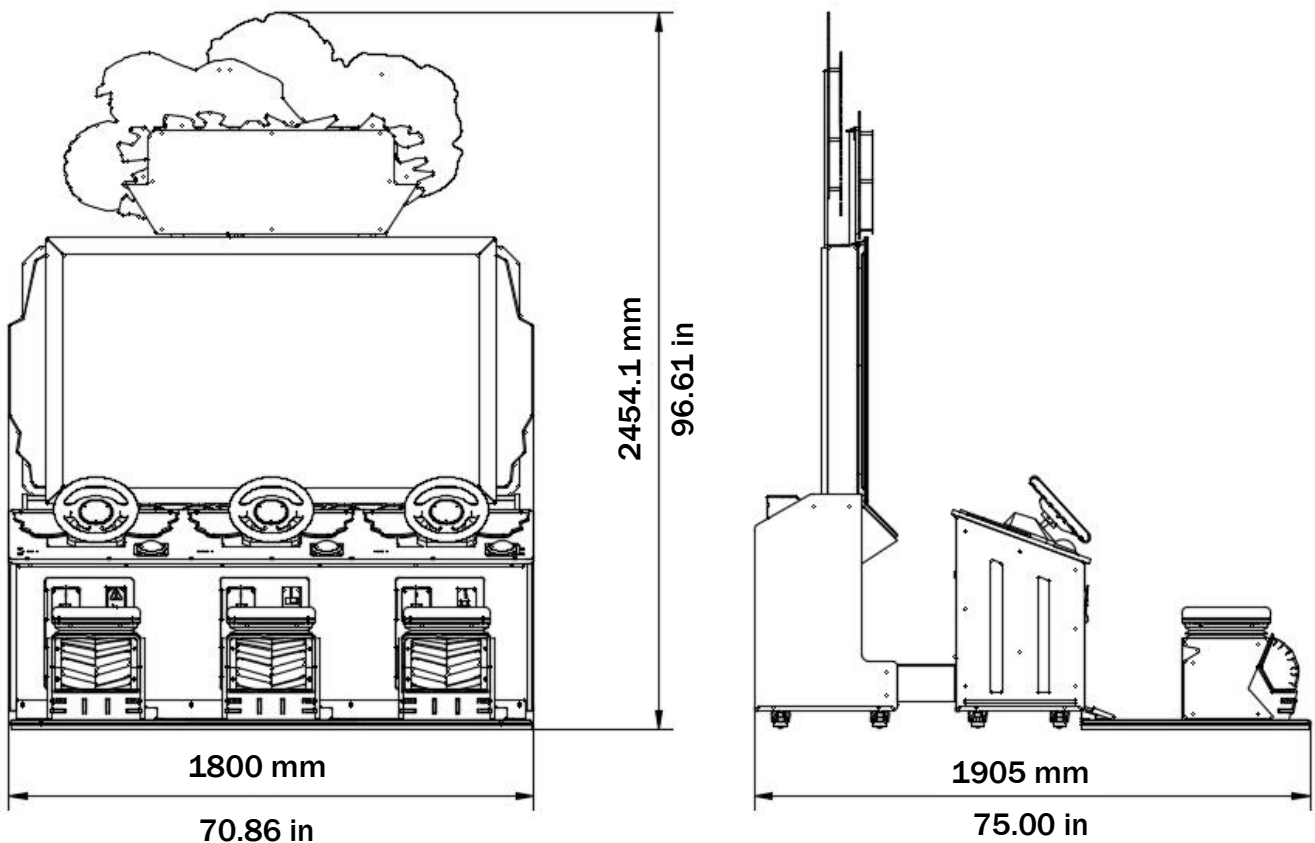

Note: Game specifications are subject to change without notice.

This machine will be divided into two parts during transportation.

2. CONTENTS OF THE ACCESSORY KIT

Open the package and make sure all the items are included:

1. Following accessories

No.	Part No.	Code No.	Name	Qty	Picture
1	B148-1501-00	2.33.01.010020	Power cord 3×16AWG 1.8M	1	
2	B148-1311-00	2.19.01.000013	Fuse Φ5×20 T10A/250V	2	
3	B148-1502-00	2.53.00171002	171A key	2	
4	B148-1503-00	2.53.00172002	171B key	2	
5	B148-1504-00	4.14.40000723	Manual	1	
6	B148-1505-00	2.66.03.030629	Coin mech blanking plate δ=1.5	3	/
7	B148-1506-00	2.66.03.030630	Tik dispenser blanking plate δ=1.5	3	/
8	B148-1507-00	201.01.020090	Cross recessed pan head screw set M6×20	10	
9	B148-1508-00	201.01.020188	Cross recessed hexagon screw set M6×25	15	
10	B148-1509-00	201.01.100041	Cross recessed pan head screw set M5×12	15	

Note: Game specifications are subject to change without notice.

3. PART NAME

Key Components



4. SET UP & INSTALLATION

! NOTICE


We do not recommend using power tools as they may cause damage.

! This product is an indoor game machine. Do not install outdoors.

- Refer to IMPORTANT SAFETY INSTRUCTIONS (Pg. 3) for places to avoid.
- Place the unit on a dry level surface.
- Ventilation openings in the back of the unit must not be obstructed by objects or by wall.

4.1 Transporting the Game

If you need to move the game, adjust the levelers back to an “up” position.

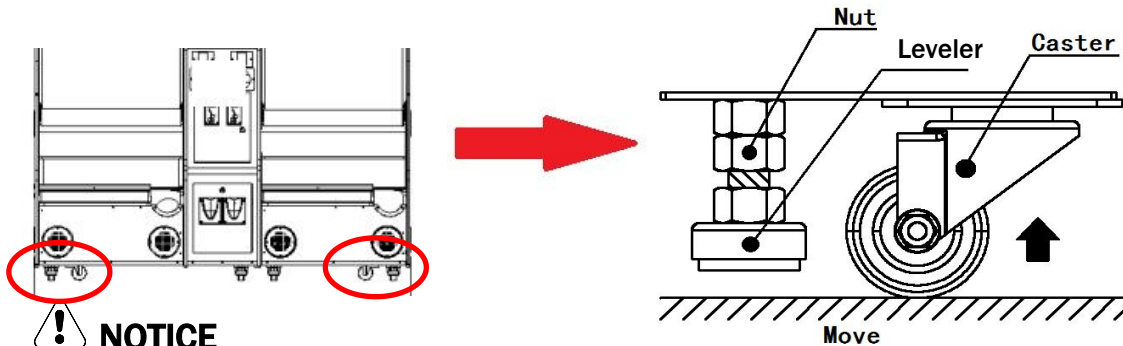


- Be careful not to damage the machine during transport.
- Always unplug the game before moving.
- Keep the machine in upright position during transport.
- For longer distance transport, package the game properly to prevent damages.

4.2 Level Adjustment

Install this game on a flat surface. If the game is installed on an unsuitable floor, it could cause game malfunction.

To secure the game, loosen the nut, utilize wrench to adjust the leveler down until it touches the floor, lifting the casters off the ground by 0.2 in/5mm. Repeat the same for all levelers.

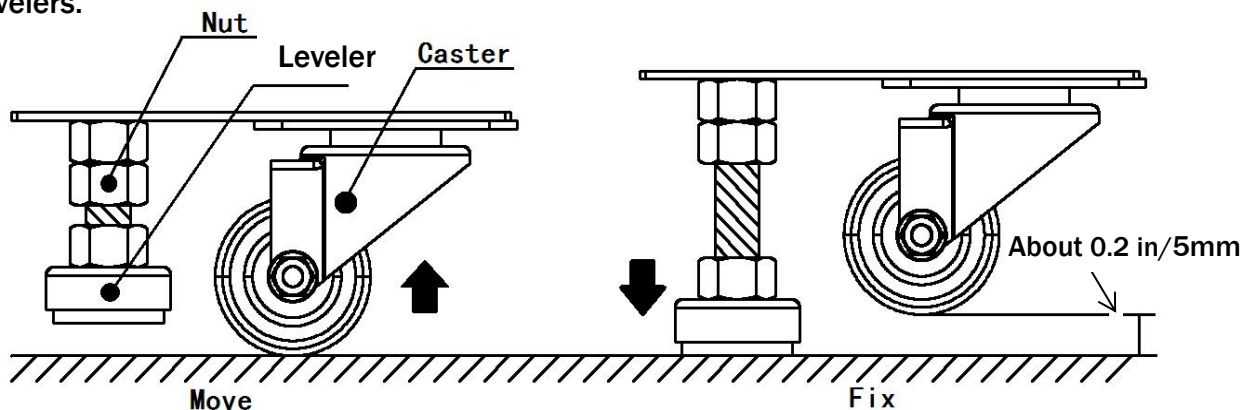


Make sure the machine is level.

4.3 Play Zone

This machine requires space for playing and for maintenance as shown below.

Leave space around the game upon installation:

Service area: 20 in/500mm

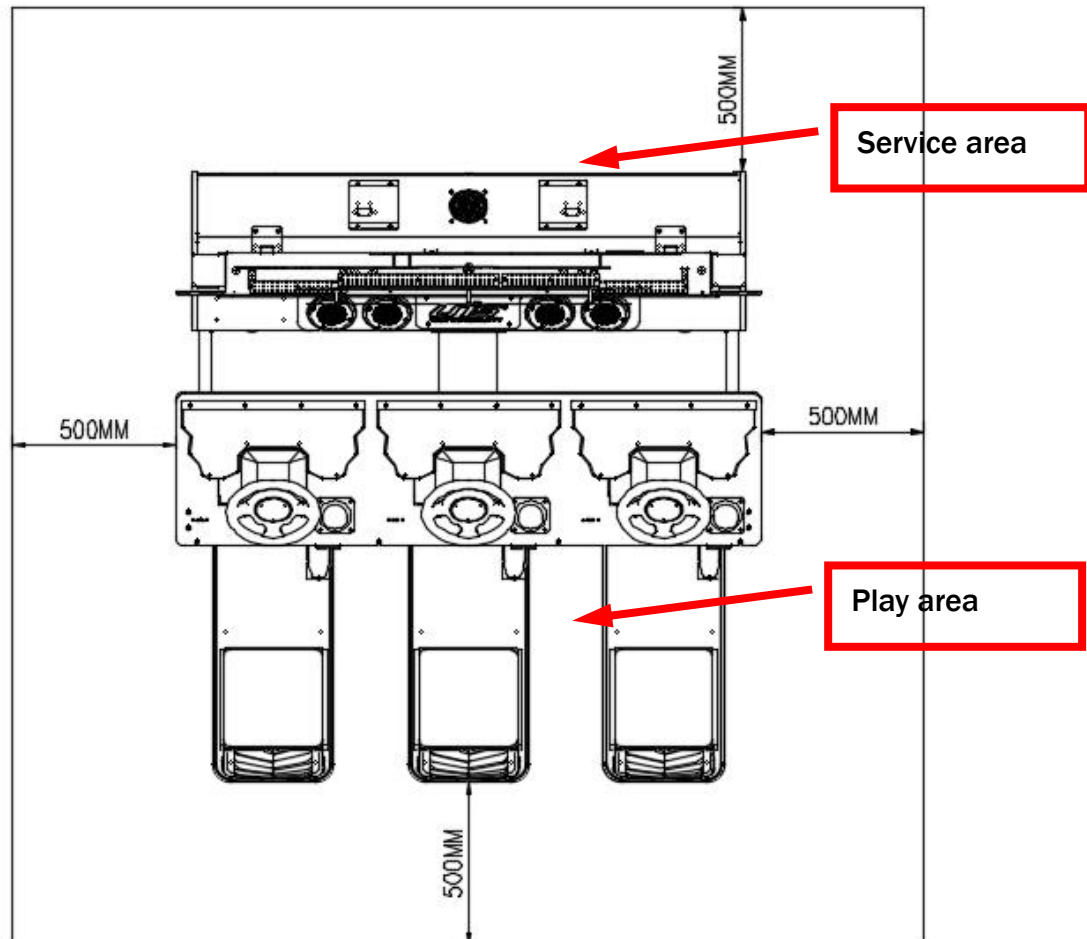


NOTICE


Your unit must be leveled to operate properly.

4.4 Machine Installation


Step 1 Loosen screws to remove Marquee assy.

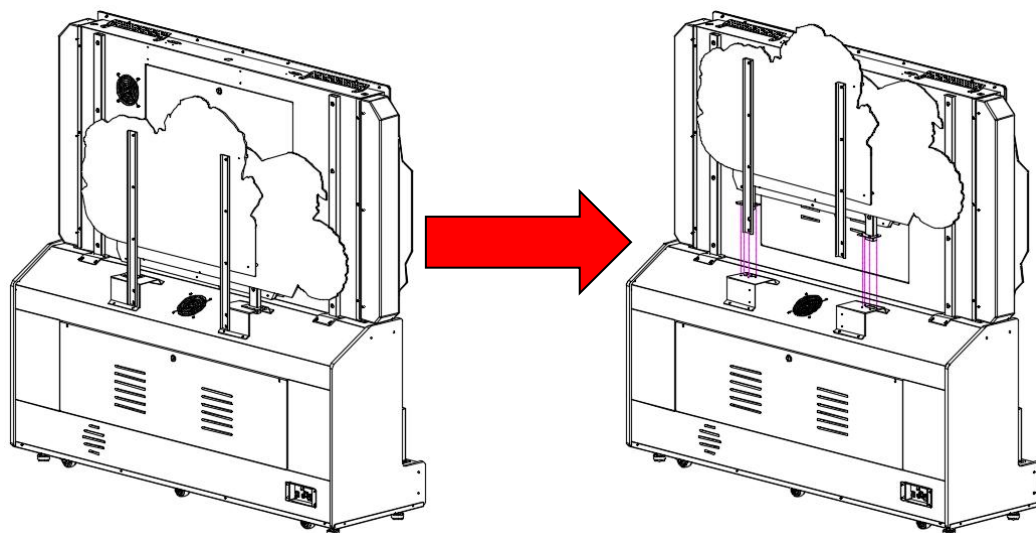


Step 2 Open upper door board. Place Marquee assy. to the top of the cabinet. Lead the connectors to the cabinet through the hole. Connect the connectors. Utilize screws to secure marquee assembly.

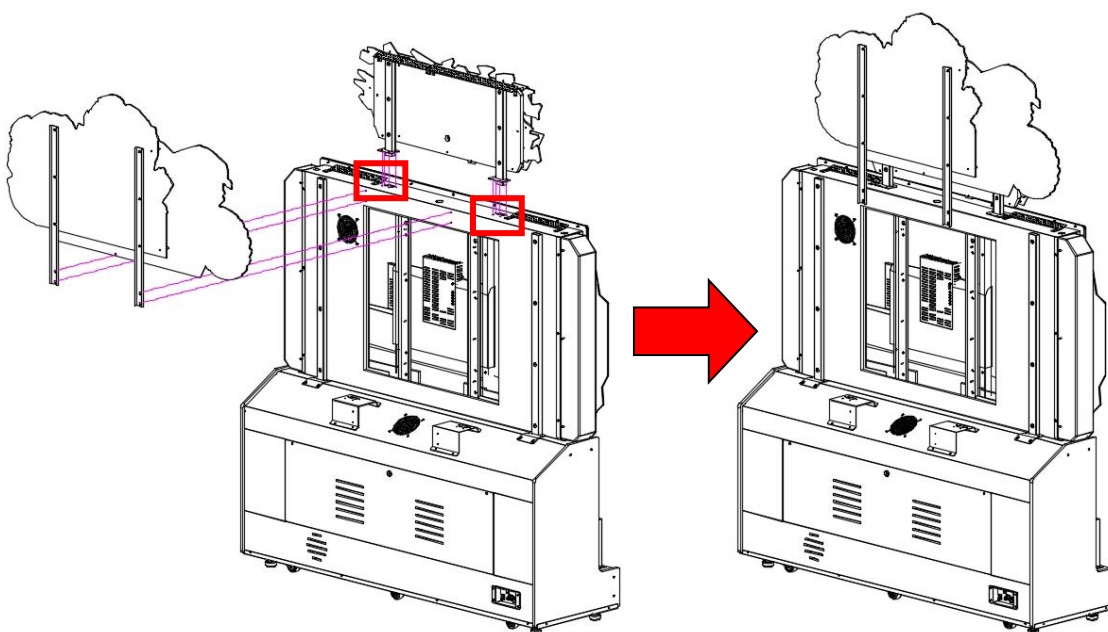

Step 3 Locate seat assembly. Turn over Seat assembly. Loosen screws to remove casters.

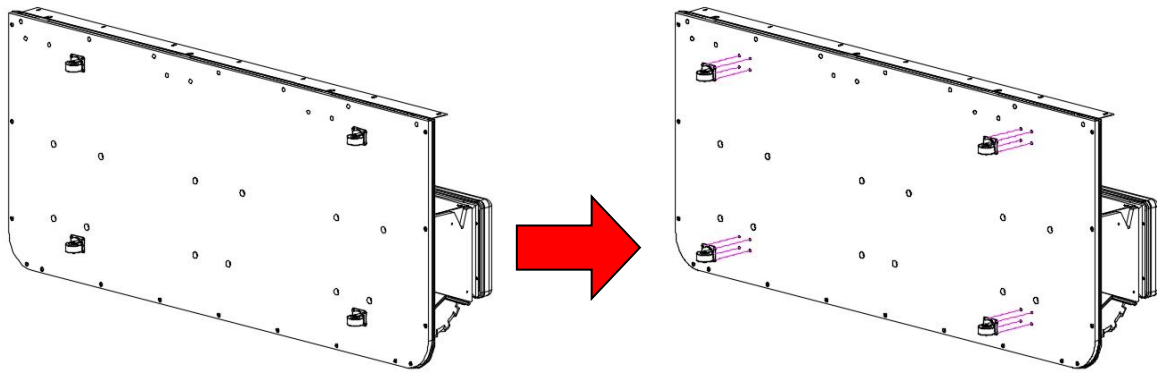


Step 4 Align Seat assy with the Control panel. Open control panel back door. Lead the Seat assy connectors to the control panel through the hole. Connect the connectors. Utilize screws to secure Seat assy and control panel.

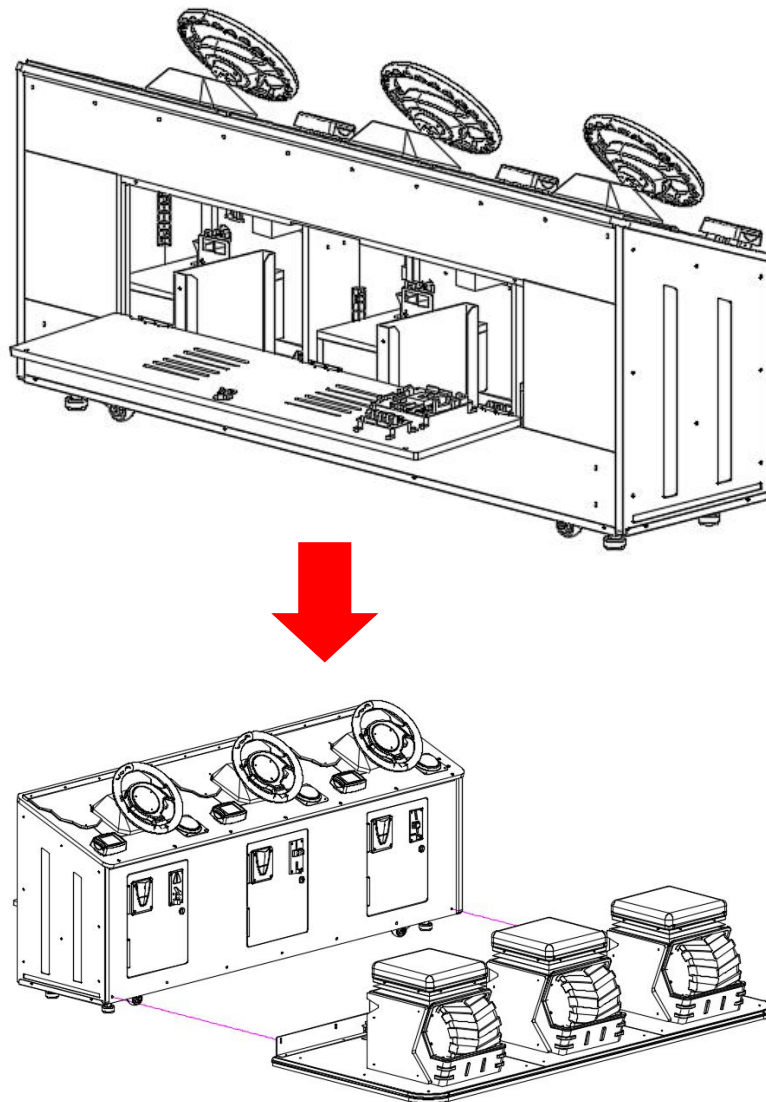


Step 5 Loosen screws to remove wiring bracket. Install Wiring bracket to the bottom of the cabinet as shown below.

Open back bottom door. Lead connectors to the wiring bracket.

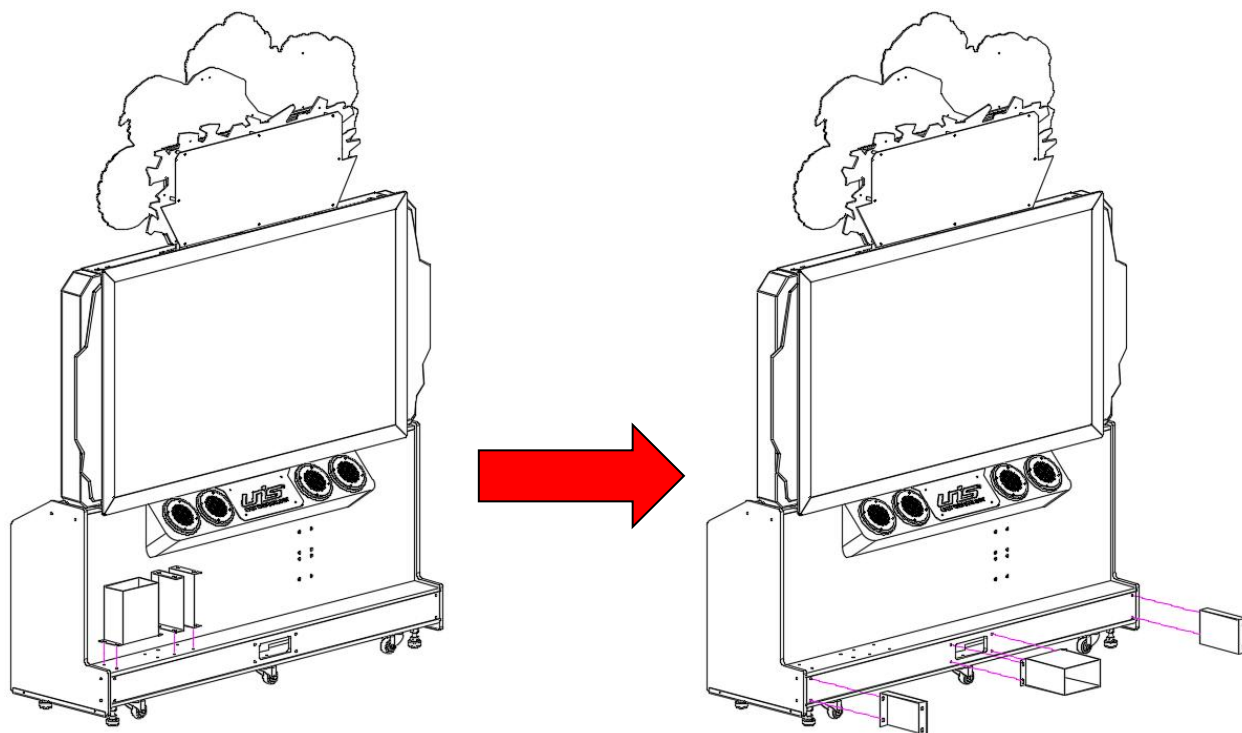

Step 6 Align Control panel with the main cabinet.

Connect all the connectors. Utilize screws to secure control panel and wiring bracket.

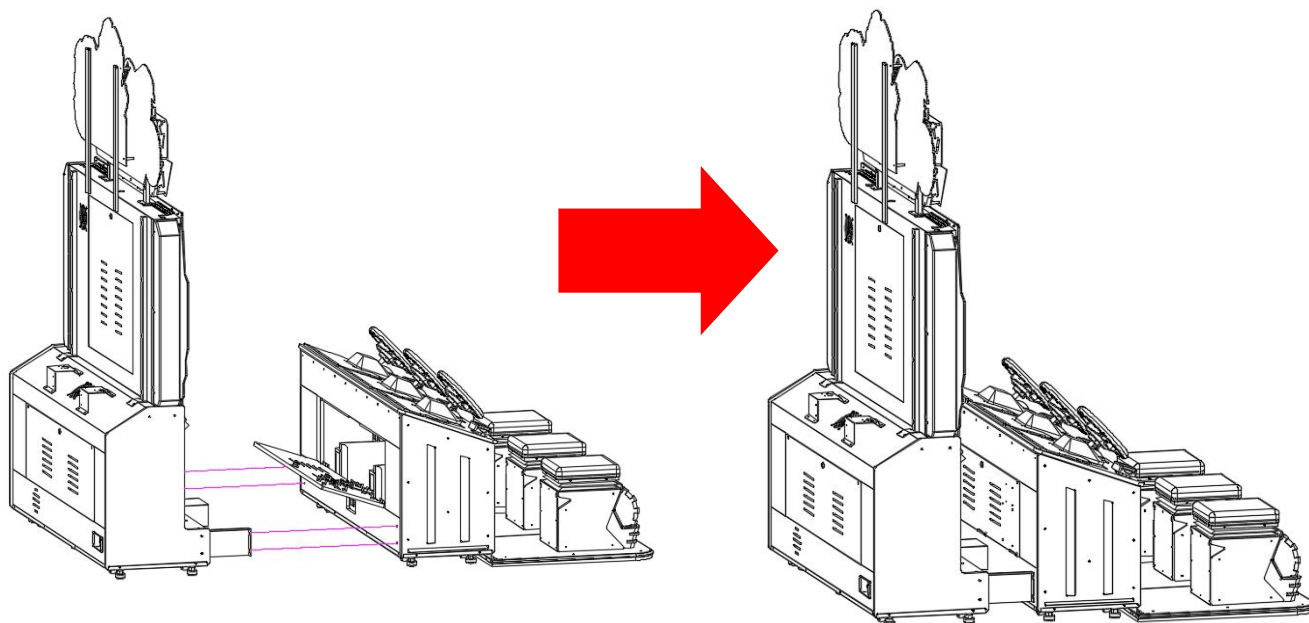

Finish!

4.5 Card Reader Installation Safety Notice



Take precaution to assure that all wiring voltages are confirmed prior to installation of card reader. All warranties are void if not properly installed resulting in logic board damage.

Important: This game is pre-wired to AAMA standards. It is highly recommended to utilize this wiring for Card reader installation.

5. HOW TO PLAY

5.1 Insert coins/tap/swipe card to play.



5.2 Select Car.



5.3 Select Map.



5.4 Ready Scene



5.5 Turn the wheel to control the car. Step on pedal to go faster.



5.6 Press button to boost to get faster.



5.7 Game over and ranking shows.




5.8 Ranking shows



6. GAME OPTION

6.1 Adjustment button instruction

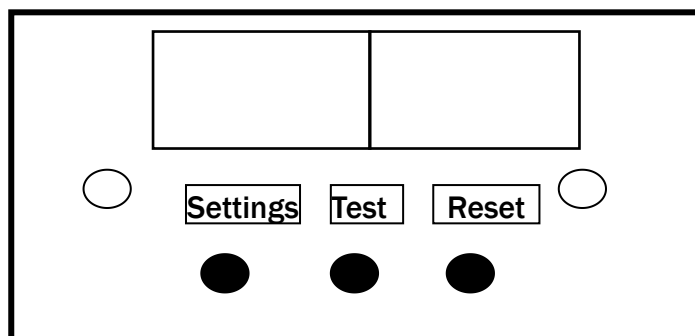

Open the coin door and there is a meter panel. Press Settings button to enter into the setting menu.

6.2 Setting menu

6.2.1 Main menu

Options
Basic Setting
Customized Setting
Output Test
Input Test
Game Reset
Date/Time Setting

Options
Language/语言
About This Game
Bookkeeping
Daily Record
Back to game

6.2.2 Basic Setting

Options	Adjustment Value	Default
Free Play	OFF_ON	OFF
Tickets Out	OFF_ON	ON
Out Of Tickets	Store Tickets in Memory_Call Attendant	Store in memory
Demo Music	OFF_ON	ON
Memory Save	OFF_ON	ON
Volume	1_10	7
Pay Mode	Insert Coins_Tap/Swipe Card_Insert Coins & Tap/Swipe Card	Insert Coins
Back&Save	1-10	5
Back	1-10	4

6.2.3 Customized Setting

Options	Adjustment Value	Default
Car Select Time	5_20	8
Scene Select Time	5_20	8
Game Time	40_480	120
Refill Mode	OFF_ON	ON
Refill Time	5_20	12
Divided By 2	OFF_ON	ON
Fixed Ticket(s) Mode	OFF_ON	OFF
Fixed Ticket(s)	0~100	6
1st Ticket(s)	1_100	10
2nd Ticket(s)	1_100	7
3rd Ticket(s)	1_100	5
Mercy Ticket(s)	1_100	3
Top Ranking	OFF_ON	ON
Number of Top Players	5_20	10
Seat Swing Speed	1_5	3
Back & Save		
Back		

6.2.4 Output Test

Options
Console Side Light
Monitor Side Light
1P Console&Seat Light
1P Start Button Light
1P Seat Vibration
1P Wheel Vibration
1P Ticket Drive
1P Channel Test
2P Console&Seat Light
2P Start Button Light
2P Seat Vibration

Options
2P Wheel Vibration
2P Ticket Drive
2P Channel Test
3P Console&Seat Light
3P Start Button Light
3P Seat Vibration
3P Wheel Vibration
3P Ticket Drive
3P Channel Test

Options
Seat Swing Speed 1
Seat Swing Speed 2
Seat Swing Speed 3
Seat Swing Speed 4
Seat Swing Speed 5
Back

6.2.5 Input Test

Options	Adjustment Value
1P Coin	OFF_ON
1P Start Button	OFF_ON
1P Steering Wheel	0-255
1P Accelerator Pedal	0-255
1P Seat Sensor	OFF_ON
1P Seat Vibration Error	OFF_ON
2P Coin	OFF_ON
2P Start Button	OFF_ON
2P Accelerator Pedal	0-255
2P Seat Sensor	OFF_ON
2P Seat Vibration Error	OFF_ON
3P Coin	OFF_ON
3P Start Button	OFF_ON
3P Seat Sensor	OFF_ON
3P Seat Vibration Error	OFF_ON
3P Accelerator Pedal	0-255
Back	

6.2.6 Game Reset

Options	Adjustment Value
Factory Restore	CANCEL_CLEAR
Reset Basic Setting	CANCEL_CLEAR
Reset Customized Setting	CANCEL_CLEAR
Clear All Records	CANCEL_CLEAR
Clear Owed Tickets	CANCEL_CLEAR
Clear Unused Coins	CANCEL_CLEAR
Back	

6.2.7 Date/Time Setting

Options
Year
Month
Day
Hour(24)
Minute
Second
Back&Save
Back

6.2.8 About This Game

Options
CPU
Motherboard
HDD
RAM
Display Adapter
Monitor
Screen
Version
Press Settings Button to Back

6.2.9 Bookkeeping

Player	Coins	Tickets	Payout	Continue Play
Non Resettable Points				
Back				

6.2.10 Daily Record

Date	Weekday	Runtime	Coins	Tickets	Payout	Service Coin	Continue Play
Clear							
Back							


7. TROUBLESHOOTINGS

7.1 Common Problem

Please confirm that all connectors fit tightly.

Symptom	Possible Cause	Recommended action
Game will not start	Frame assembly connector is loose.	Check connector.
	Frame assembly fault	Contact with UNIS Service.
Power off	Circuit protector make power SW in off state.	Turn on power SW again. If appeared again and again, machine has anomaly. Please contact with UNIS Service.
Card reader not working	The connector is loose.	Check connector.
	Card reader fault.	Check with card reader manufacturer.
No ticket dispensing	Out of ticket.	Add ticket and press reset button
	Ticket jamming.	Remove the jammed tickets and press reset button.
	The connector is loose.	Plug the connector tightly.
No sound	Low volume	Raise the volume.
	Connector loose.	Check connector.
	Speaker fault.	Check speaker.
	POT installation error.	Install POT correctly.
	POT fault.	Change POT.
	Audio cable problem.	Reconnect the audio cable or change it.

If you see following error signs showing on the display, please try the recommended action.

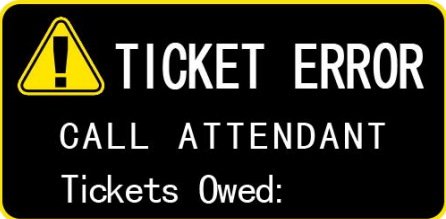Display	Possible Cause	Recommended action
	The connection part of the IO board.	Check and reconnect the loose ports of the PC.
	Cable quality problem	Change the cable after checking the connection between IO board.
	Cable became loose during transportation.	Check and reconnect the loose cables of the IO board.
	IO board is faulty.	Reboot the game after checking U disk connection and cable problem, if the problem remains unresolved, please call the service department for assistance.
	Out of ticket.	Refill ticket
	Loose connection of the ticket dispenser's cables.	Check and reconnect the loose cables to the ticket dispenser.
	Ticket dispenser is faulty.	Change the ticket dispenser.
	Ticket jam.	Remove jammed tickets.
	Out of ticket.	Refill tickets and press reset button.


7.2 System Recovery Operation **(NOTE: Do not disconnect power during this process.)**

1. Turn off the game. Remove the recovery stick from the holder. (Note: This process may take up to 30s)

2. Turn game on. Insert the recovery stick into the port of the Mainboard.

Note: Don't insert the recovery stick into your Mainboard while is powering on the machine.

2. The system recovery screen as shown.

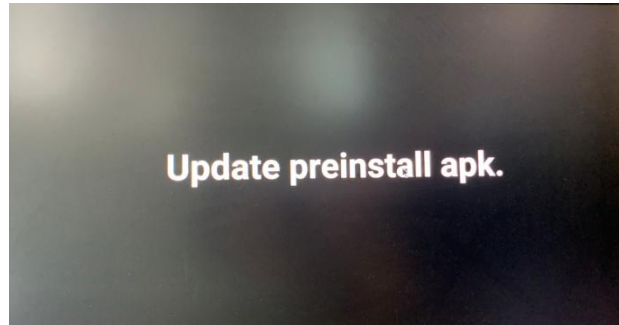

3. The game will automatically start recovery.

4. Once system recovery is finished and the Game list screen appear, remove the recovery stick from the Mainboard.

5. Assure that the recovery stick has been properly secured for future use.



WARNING: The recovery stick should only be used to fix software errors. Using it for other purposes may cause unexpected results and damages.

8. MAINTENANCE & INSPECTION

8.1 Safety Check

Check the points listed before operating the machine. These checks are necessary for safe machine operation:

1. Test game before operation each day.
2. Conduct monthly routine checks of game components to ensure good working condition.
3. Check the machine regularly for dust and clean when necessary.

Note: Parts and components require preventative maintenance to maintain proper operation.

8.2 Handling Precautions

When installing or inspecting the machine, be very careful and pay attention to ensure that the player can enjoy the game safely.

Inappropriate handling running counter to the cautionary matters can cause personal injury or damage to the machine.




NOTICE

We do not recommend using power tools as they may cause damage.


9. OVERALL CONSTRUCTION

9.1 General Assembly

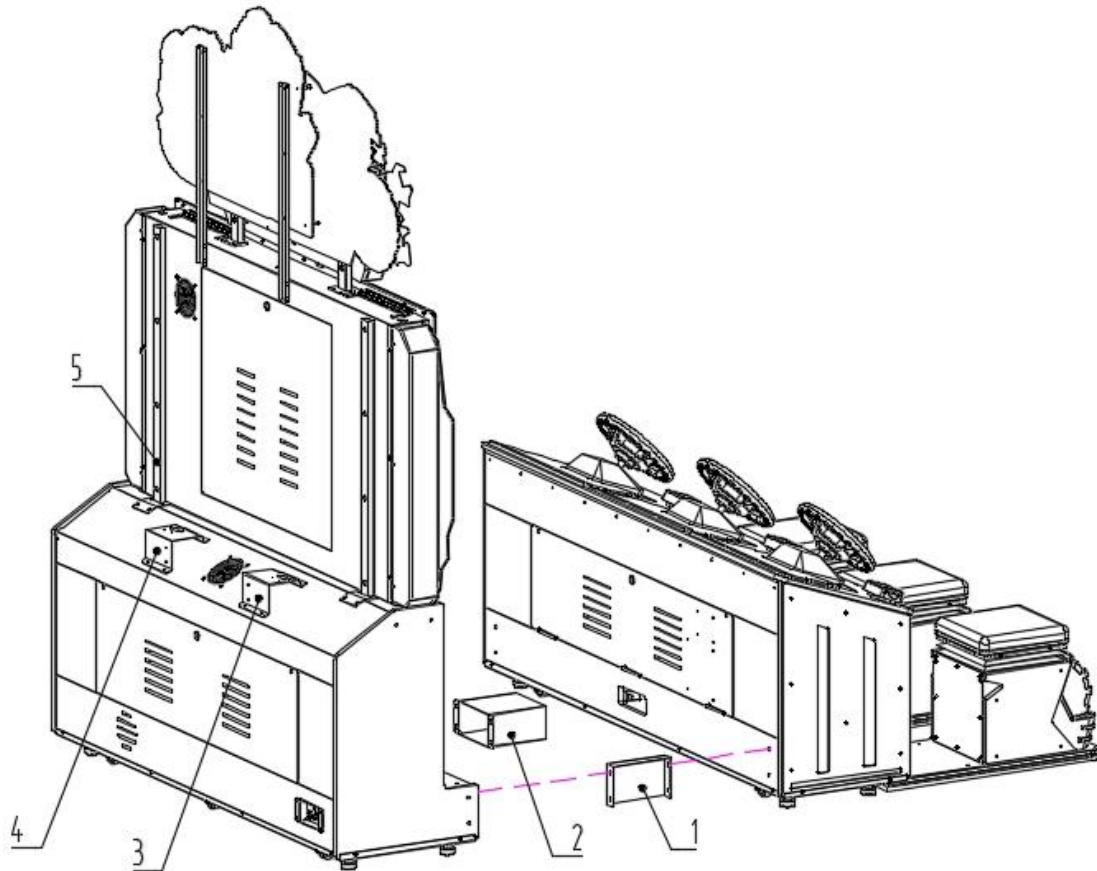


No.	Part No.	Code No.	Name	Version	Qty
1	B148-0001-00	202.4.2003.133	Wiring bracket	V1.1	2
2	B148-0002-00	202.4.2003.132	Wiring plate	V1.1	1
3	B148-0004-00	202.4.2003.071	Packing L plate	V1.1	1
4	B148-0005-00	202.4.2003.072	Packing R plate	V1.1	1
5	B148-0003-00	202.4.2003.134	Monitor back fixing plate	V1.1	2

9.2 Monitor Assembly

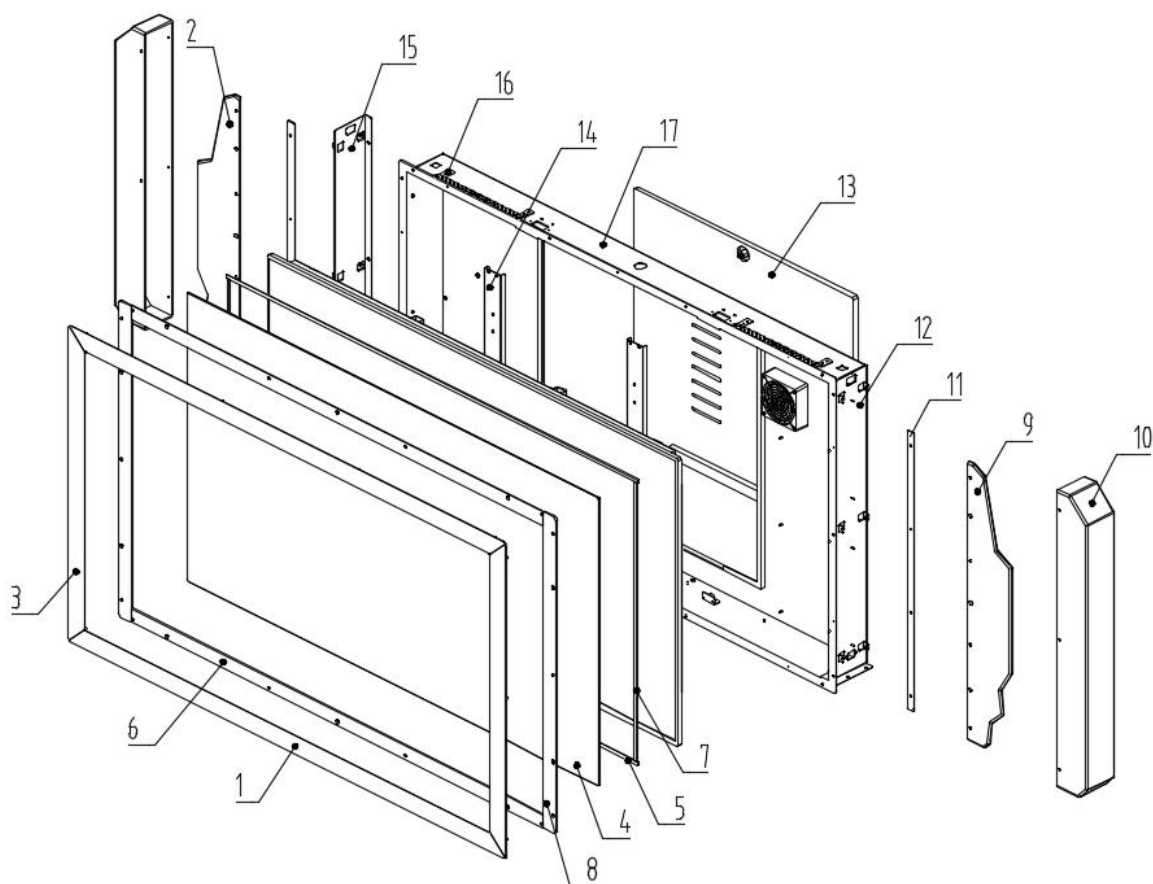


No.	Part No.	Code No.	Name	Version	Qty
1	B148-0701-00	202.4.2170.008	Up&down plate	V1.1	2
2	B148-0702-00	206.4.2003.061	L light plastic	V1.1	1
3	B148-0703-00	202.4.2170.009	L&R panel plate	V1.1	2
4	B148-0704-00	206.4.2170.008	Monitor glass	V1.1	1
5	B148-0705-00	206.4.2170.001	Up&down dust-free foam	V1.1	2
6	B148-0706-00	206.4.2170.010	Up&down block PP	V1.1	2
7	B148-0707-00	206.4.2170.002	L&R dust-free foam	V1.1	2
8	B148-0708-00	206.4.2170.009	L&R block PP	V1.1	2
9	B148-0709-00	206.4.2003.062	R light plastic	V1.1	1
10	B148-0710-00	206.4.2003.041	L&R side light plastic	V1.1	2
11	B148-0711-00	202.4.2003.078	Light pressing plate	V1.1	2
12	B148-0712-00	202.4.2003.156	R base plate	V1.1	1
13	B148-0713-00	203.4.2003.086	Upper door board	V1.1	1
	B148-0515-00	2.53.00171001	171A lock	V1.1	1
14	B148-0714-00	202.4.2003.142	Monitor fixing plate	V1.1	2
15	B148-0715-00	202.4.2003.155	L base plate	V1.1	1
16	B148-0716-00	202.4.2003.137	Light bracket A	V1.1	4
17	B148-0717-00	202.4.2003.077	Monitor frame	V1.1	1

9.3 Marquee Assembly

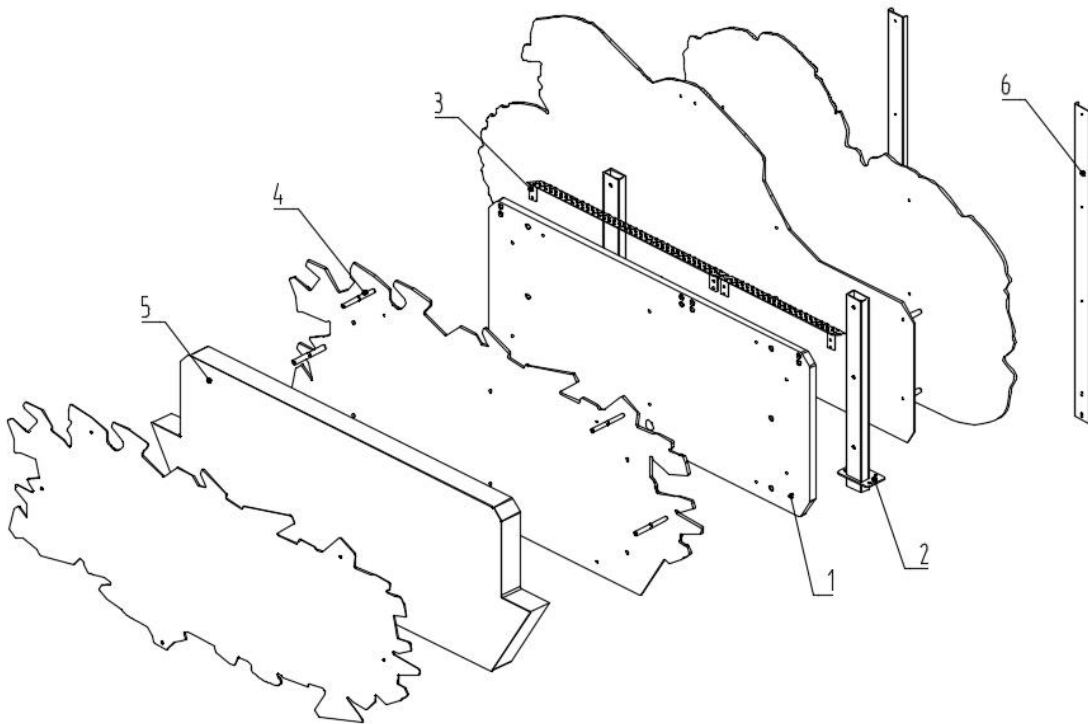


No.	Part No.	Code No.	Name	Version	Qty
1	B148-0801-00	203.4.2003.102	Marquee back board	V1.1	1
2	B148-0802-00	202.4.2003.112	Front marquee bracket	V1.1	2
3	B148-0803-00	202.4.2003.140	Light bracket B	V1.1	4
4	B148-0804-00	205.4.2410.002	Back Andy board	V1.1	1
5	B148-0805-00	201.08.04.4021	Isolation column	V1.1	14
6	B148-0806-00	206.4.2003.065	LOGO marquee	V1.1	1

9.4 Driving Wheel

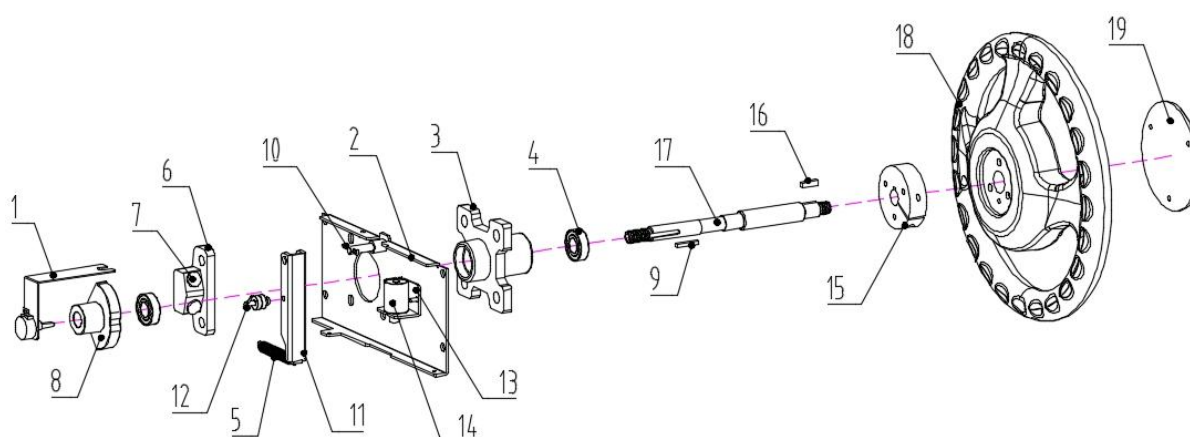


No.	Part No.	Code No.	Name	Version	Qty
1	B148-0901-00	202.4.1606B.042	POT mounting plate	V1.1	1
2	B148-0902-00	202.4.2003.101	Connect bracket	V1.1	1
3	B148-0903-00	202.4.1606B.037	Bearing plate	V1.1	1
4	B148-0904-00	201.06.000082	Bearing	V1.1	2
5	B148-0905-00	2.51.10.010028	Spring with hook	V1.1	1
6	B148-0906-00	202.4.1606B.032	Limited block	V1.1	1
7	B148-0907-00	206.4.1606B.026	Anti-shake PU	V1.1	2
8	B148-0908-00	202.4.2003.102	Crank wheel	V1.1	1
9	B148-0909-00	202.4.1606B.034	Flat key 2	V1.1	1
10	B148-0910-00	201.07.000120	Cotter pin(d3×20)	V1.1	1
11	B148-0911-00	202.4.2003.104	Rod	V1.1	1
12	B148-0912-00	201.07.110001	Dowels	V1.1	1
	B148-0913-00	201.07.000108	Cotter pin(d2×20)	V1.1	1
	B148-0914-00	202.4.2003.106	Shaking motor bracket	V1.1	2
13	B148-0915-00	2.34.04.000246	DC motor	V1.1	1
14	B148-0916-00	201.06.000011	Bearing(605ZZ)	V1.1	1
15	B148-0917-00	202.4.2209.107	Driving wheel connect	V1.1	1
16	B148-0918-00	202.4.1606B.033	Flat key 1	V1.1	1
17	B148-0919-00	202.4.1606B.031	Driving axle	V1.1	1
18	B148-0920-00	202.4.1606B.038	Driving wheel PU	V1.1	1
19	B148-0921-00	206.4.1830.013	Driving wheel cover ABS	V1.1	1

9.5 Control Panel Wooden Case Assembly

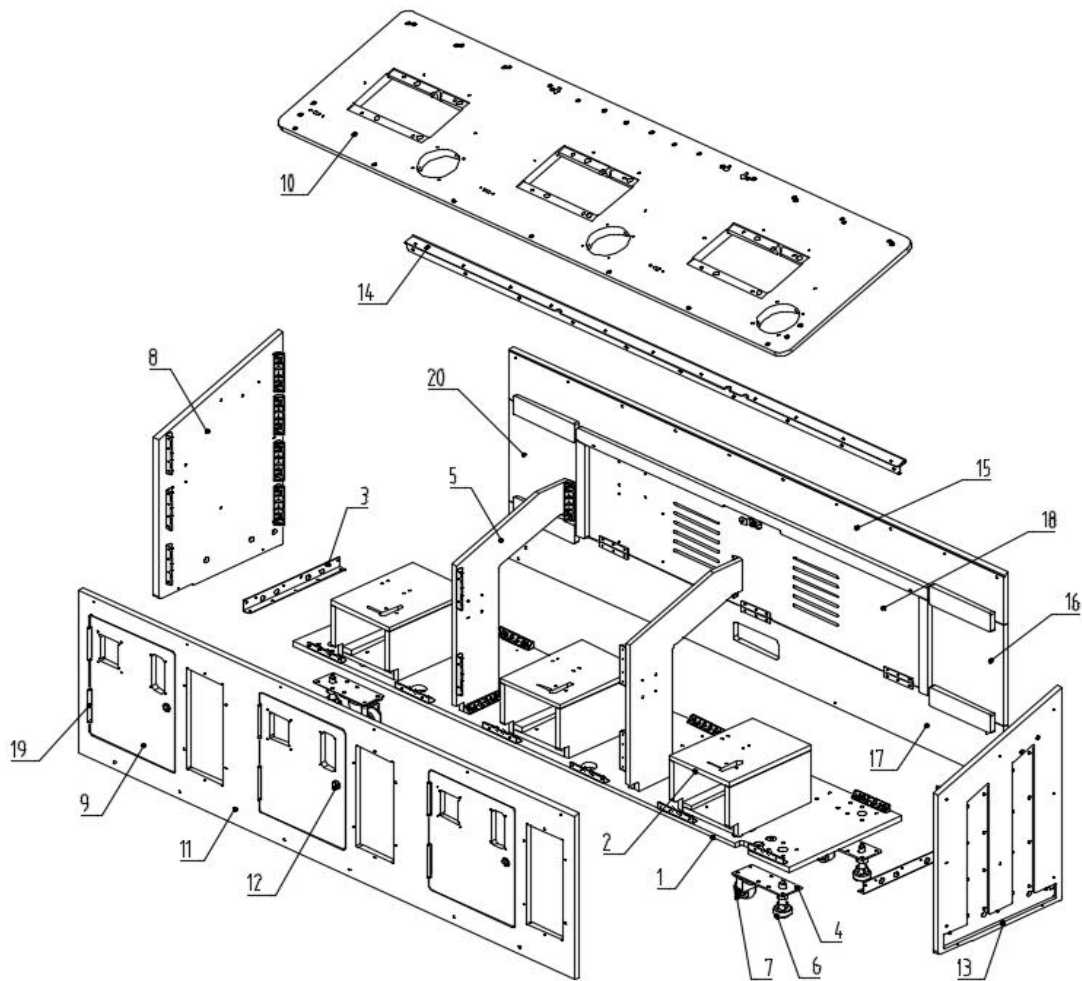


No.	Part No.	Code No.	Name	Version	Qty
1	B148-0501-00	203.4.2003.087	Control panel base board	V1.1	1
2	B148-0502-00	203.4.2003.098	Coin outer box	V1.1	2
3	B148-0503-00	202.4.2003.087	Inner plate	V1.1	2
4	B148-0504-00	2.60.00010000	Caster plate	V1.1	4
5	B148-0506-00	203.4.2003.099	Front board	V1.1	2
6	B148-0508-00	2.60.00008000	Leveller	V1.1	4
7	B148-0509-00	2.55.01.000047	2.5" caster	V1.1	4
8	B148-0510-00	203.4.2003.088	Panel L side board	V1.1	1
9	B148-0512-00	203.4.2003.095	Panel front door board	V1.1	3
10	B148-0513-00	203.4.2003.097	Panel top board	V1.1	1
11	B148-0514-00	203.4.2003.094	Panel front board	V1.1	1
12	B148-0515-00	2.53.00171001	171A lock	V1.1	4
13	B148-0516-00	203.4.2003.089	Panel R side board	V1.1	1
14	B148-0517-00	202.4.2003.086	Panel hinge plate	V1.1	1
15	B148-0519-00	203.4.2003.093	Panel back board	V1.1	1
16	B148-0520-00	203.4.2003.092	Panel back R side board	V1.1	1
17	B148-0521-00	203.4.2003.090	Panel back bottom board	V1.1	1
18	B148-0522-00	203.4.2003.096	Panel back door	V1.1	1
19	B148-0523-00	2.63.00.000001	4" hinge	V1.1	9
20	B148-0524-00	203.4.2003.091	Panel back L side board	V1.1	1

9.6 Panel Electrical Wooden Assembly

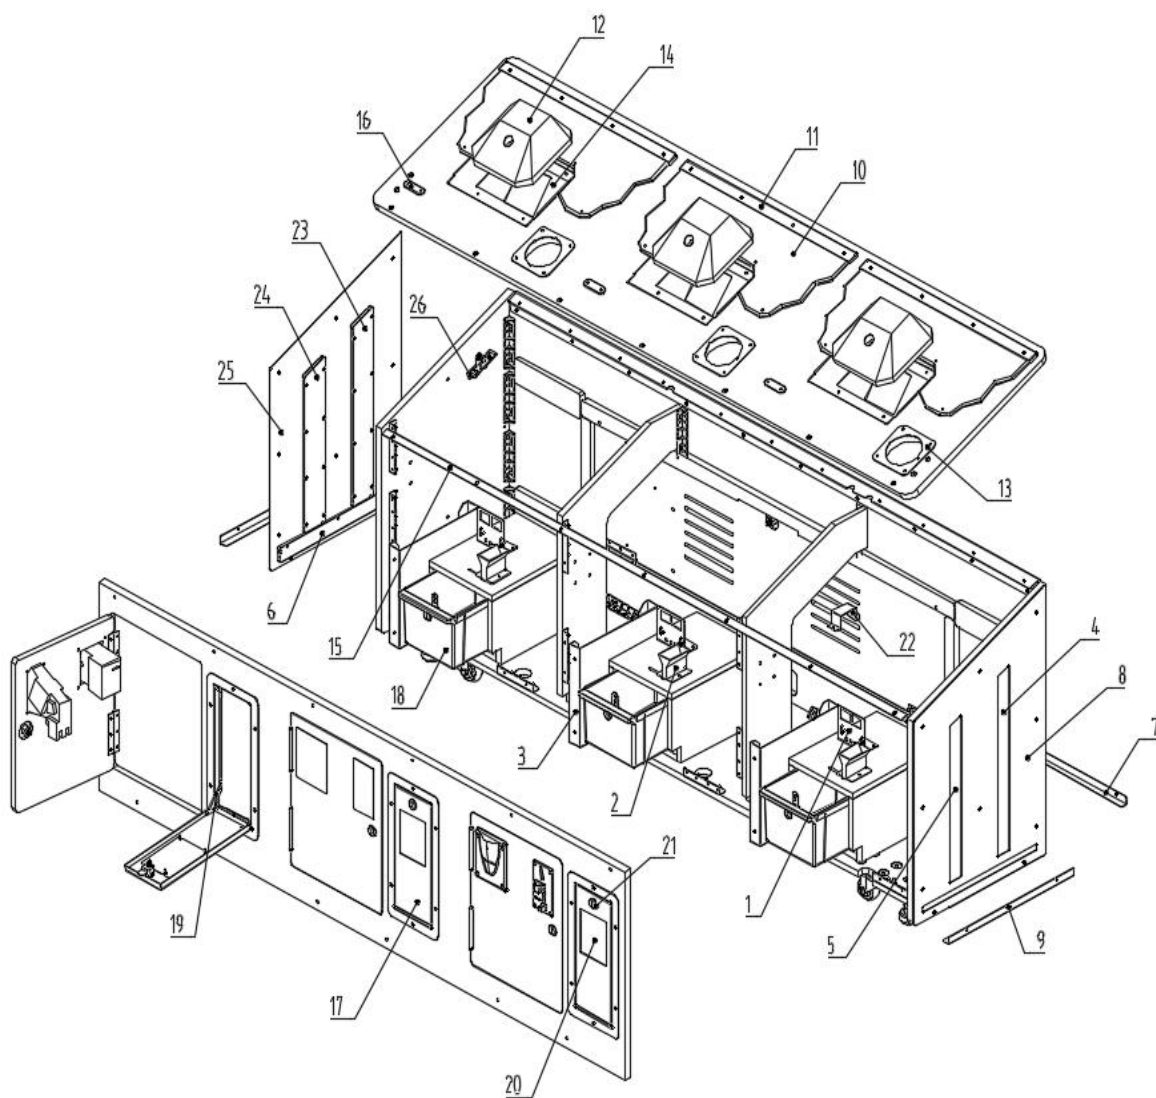


No.	Part No.	Code No.	Name	Version	Qty
1	B148-0601-00	202.4.2003.138	Mid counter plate	V1.1	3
2	B148-0602-00	202.4.2003.150	Coin chute	V1.1	3
3	B148-0603-00	2.60.00075000	Ticket box	V1.1	3
4	B148-0604-00	205.4.2410.111	Panel R light plastic A	V1.1	1
5	B148-0605-00	205.4.2410.112	Panel R light plastic B	V1.1	1
6	B148-0606-00	205.4.2410.010	Panel L light plastic C	V1.1	2
7	B148-0607-00	202.4.2003.088	Panel F&R protect plate	V1.1	1
8	B148-0608-00	202.4.2003.152	R panel plate	V1.1	1
9	B148-0609-00	202.4.2003.089	Panel L&R protect plate	V1.1	2
10	B148-0610-00	206.4.2003.064	Panel decoration plastic	V1.1	3
11	B148-0611-00	202.4.2003.100	Panel decoration pressing plate	V1.1	3
12	B148-0612-00	202.4.2003.098	Shading plate	V1.1	3
13	B148-0613-00	202.4.2003.157	Button bracket	V1.1	3
14	B148-0614-00	202.4.2003.097	Steering wheel fixing base plate	V1.1	3
15	B148-0615-00	202.4.2003.096	Panel fixing plate	V1.1	1
16	B148-0616-00	205.4.2410.024	Card reader cover PVC	V1.1	3
17	B148-0617-00	202.4.2003.153	DBV door	V1.1	3
	B148-0619-00	2.53.00172001	171B lock	V1.1	3
18	B148-0618-00	2.60.00068000	Coin inner box	V1.1	3
	B148-0619-00	2.53.00172001	171B lock	V1.1	3
19	B148-0620-00	2.60.00018004	Hook	V1.1	3
20	B148-0621-00	202.4.2003.154	DBV cover plate	V1.1	3
21	B148-0622-00	202.4.2003.162	Lock pin	V1.1	3
22	B148-0623-00	202.4.2002.044	Power supply pressing plate	V1.1	1
23	B148-0624-00	205.4.2410.108	Panel L light plastic A	V1.1	1
24	B148-0625-00	205.4.2410.109	Panel L light plastic B	V1.1	1
25	B148-0626-00	202.4.2003.151	L panel plate	V1.1	1
26	B148-0627-00	202.4.2003.093	Air spring support plate	V1.1	2
	B148-0628-00	2.51.01.21.1020	Air spring rod	V1.1	2

9.7 Seat Assembly

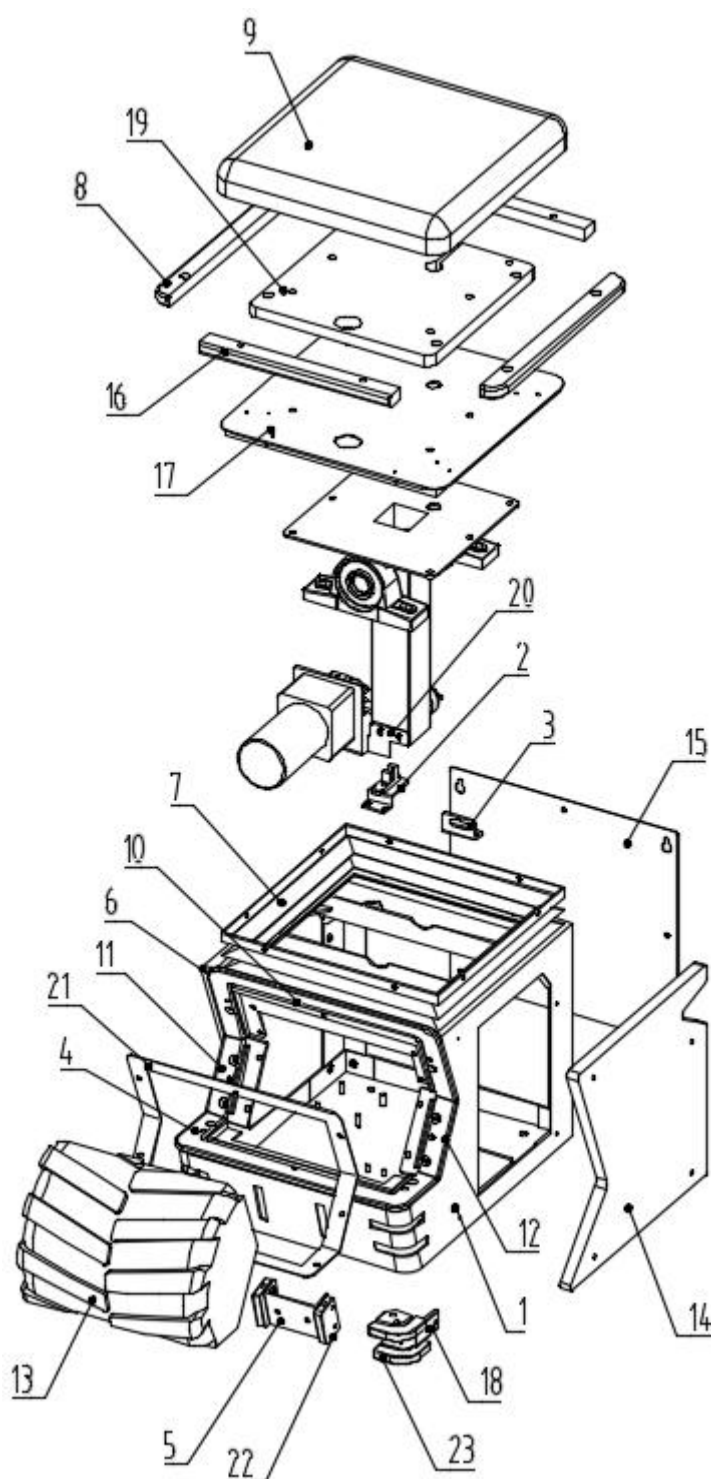


No.	Part No.	Code No.	Name	Version	Qty
1	B148-0101-00	202.4.2003.158	Seat base bracket	V1.1	1
2	B148-0105-00	202.4.2003.119	Sensor mounting plate	V1.1	1
3	B148-0106-00	202.4.2003.141	Terminal plate	V1.1	1
4	B148-0107-00	206.4.2003.049	Tire bottom light plastic	V1.1	1
5	B148-0111-00	202.4.2003.124	Small column mounting plate	V1.1	1
6	B148-0116-00	203.4.2003.105	L decoration board	V1.1	1
7	B148-0118-00	206.4.2003.055	Skirt	V1.1	1
8	B148-0121-00	206.4.2003.047	L cushion light plastic	V1.1	2
9	B148-0122-00	206.4.2003.067	Yellow cushion	V1.1	1
	B148-0201-00	206.4.2003.066	Blue cushion	V1.1	1
	B148-0301-00	206.4.2003.046	Red cushion	V1.1	1
10	B148-0126-00	206.4.2003.052	Tire up light plastic	V1.1	1
11	B148-0127-00	206.4.2003.050	Tire L light plastic	V1.1	1
12	B148-0128-00	206.4.2003.051	Tire R light plastic	V1.1	1
13	B148-0129-00	206.4.2003.056	Tire Abs	V1.1	1
14	B148-0130-00	203.4.2003.106	R decoration	V1.1	1
15	B148-0131-00	202.4.2003.122	Front blanking plate	V1.1	1
16	B148-0132-00	206.4.2003.048	R cushion light plastic	V1.1	2
17	B148-0133-00	202.4.2003.120	Bottom pad plate	V1.1	1
18	B148-0134-00	202.4.2003.125	L mounting plate	V1.1	1
	B148-0135-00	202.4.2003.126	R mounting plate	V1.1	1
19	B148-0136-00	203.4.2003.103	Cushion blocking board	V1.1	1
20	B148-0137-00	202.4.2003.118	Position plate	V1.1	1
21	B148-0138-00	202.4.2003.123	Back pressing plate	V1.1	1
22	B148-0139-00	206.4.2003.053	Small light plastic	V1.1	2
23	B148-0140-00	206.4.2003.054	Slanting light plastic	V1.1	4

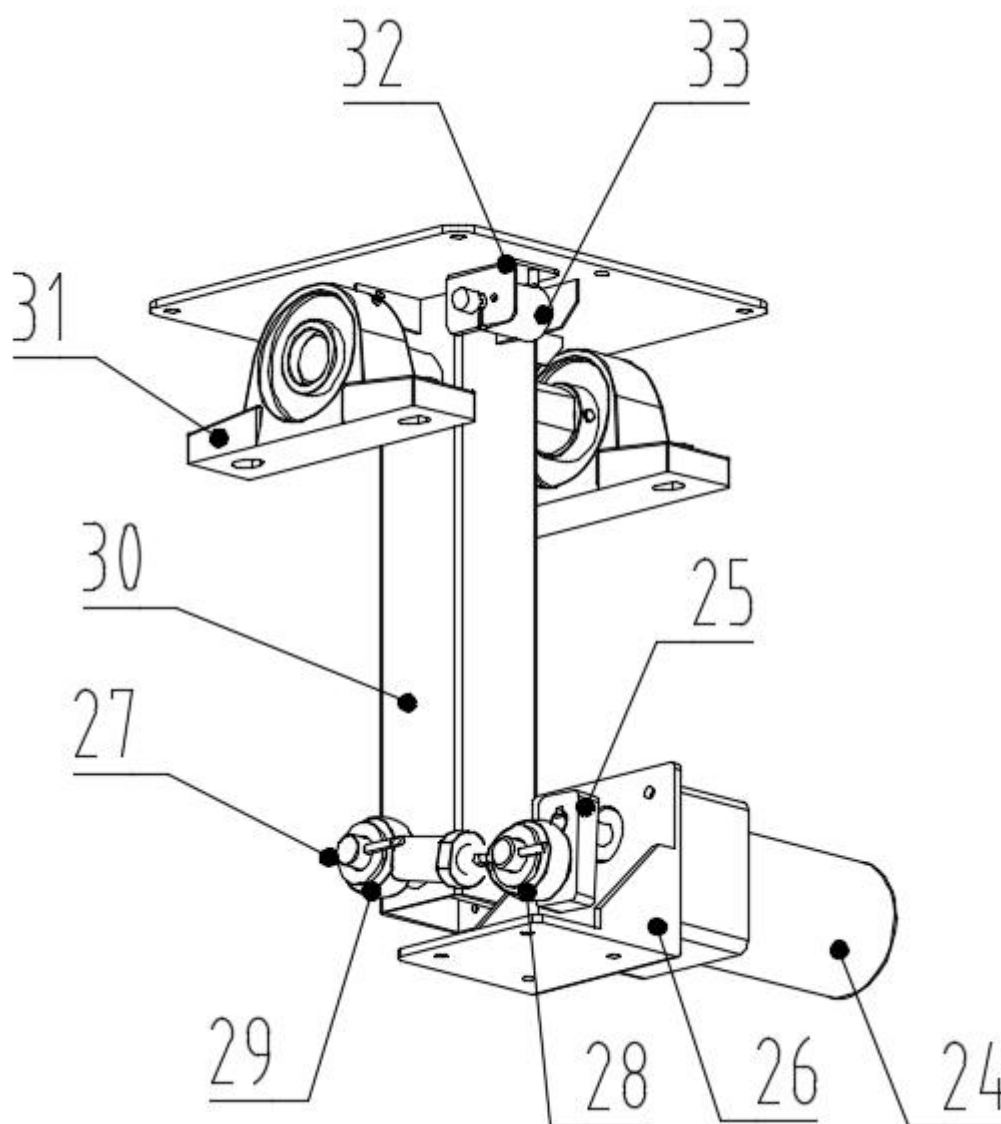


No.	Part No.	Code No.	Name	Version	Qty
24	B148-0102-00	2.34.04.010133	DC motor	V1.1	1
25	B148-0103-00	202.4.2003.161	Idle block plate	V1.1	1
26	B148-0104-00	202.4.2003.159	Motor bracket	V1.1	1
27	B148-0108-00	201.07.110020	Washer pin	V1.1	2
28	B148-0109-00	201.06.08.0128	Rod bearing	V1.1	1
29	B148-0110-00	201.06.08.0006	Bearing	V1.1	1
30	B148-0112-00	202.4.2003.160	Large arm	V1.1	1
31	B148-0113-00	201.06.13.0030	Bearing(UCP205)	V1.1	2
32	B148-0114-00	202.4.2003.106	Shaking motor bracket	V1.1	1
33	B148-0115-00	2.34.04.010069	Shaking motor	V1.1	1

9.8 Seat Base Assembly

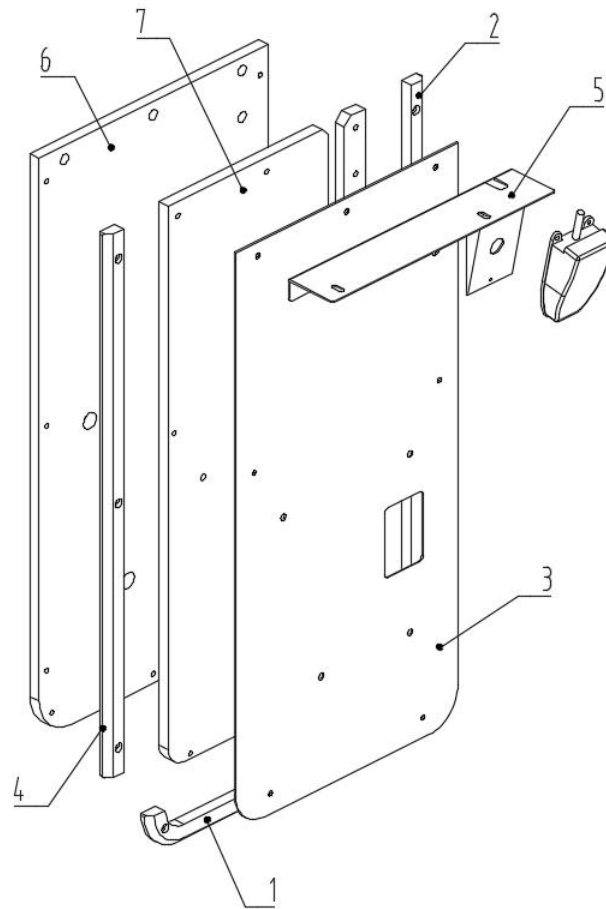


No.	Part No.	Code No.	Name	Version	Qty
1	B148-0401-00	206.4.2003.076	Back light plastic	V1.1	1
2	B148-0402-00	206.4.2003.075	R light plastic	V1.1	1
3	B148-0403-00	206.4.2003.077	Anti-shake plate	V1.1	1
4	B148-0404-00	206.4.2003.074	L light plastic	V1.1	1
5	B148-0405-00	202.4.2003.111	Pedal fixing plate	V1.1	1
6	B148-0406-00	203.4.2003.100	Pedal bottom base board	V1.1	1
7	B148-0408-00	203.4.2003.101	Pedal bottom upper board	V1.1	1

9.9 Back Cabinet Wooden Case Assembly

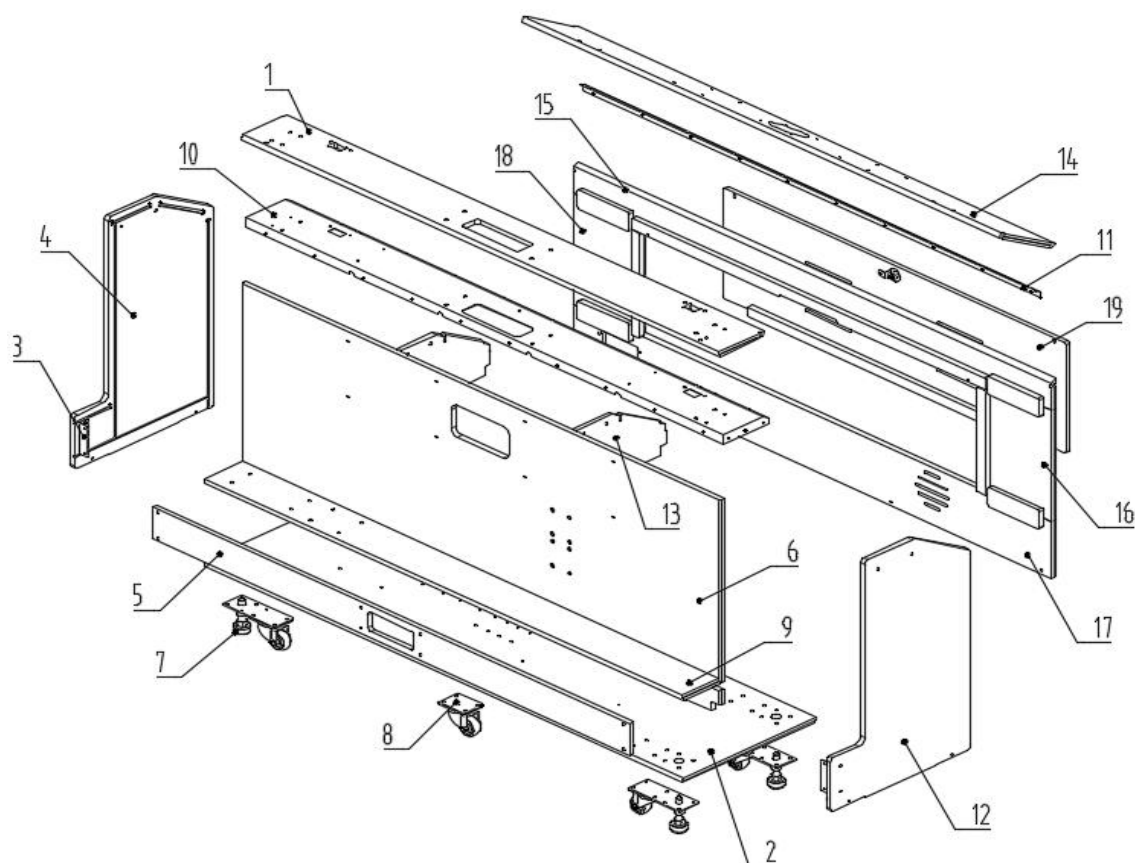


No.	Part No.	Code No.	Name	Version	Qty
1	B148-1001-00	203.4.2003.077	Up top board	V1.1	1
2	B148-1002-00	203.4.2003.071	Base board	V1.1	1
3	B148-1003-00	202.4.2003.136	Inner board	V1.1	2
4	B148-1004-00	203.4.2003.072	Bottom L side board	V1.1	1
5	B148-1005-00	203.4.2003.081	Bottom front board	V1.1	1
6	B148-1006-00	203.4.2003.075	Mid vertical board	V1.1	1
7	B148-0508-00	2.60.00008000	Leveller	V1.1	4
	B148-0509-00	2.55.01.000047	2.5" caster	V1.1	6
	B148-0504-00	2.60.00010000	Caster plate	V1.1	4
8	B148-1007-00	202.4.2142.001	Caster base plate	V1.1	2
9	B148-1008-00	203.4.2003.080	Front top board	V1.1	1
10	B148-1009-00	202.4.2003.135	Connect plate A	V1.1	1
11	B148-1010-00	202.4.2003.074	Connect plate B	V1.1	1
12	B148-1011-00	203.4.2003.073	Bottom R side board	V1.1	1
13	B148-1012-00	203.4.2003.085	Back mid board	V1.1	2
14	B148-1013-00	203.4.2003.076	Back slanting board	V1.1	1
15	B148-1014-00	203.4.2003.078	Back board	V1.1	1
16	B148-1015-00	203.4.2003.083	Door R side board	V1.1	1
17	B148-1016-00	203.4.2003.074	Power board	V1.1	1
18	B148-1017-00	203.4.2003.082	Door L side board	V1.1	1
19	B148-1018-00	203.4.2003.079	Back bottom door board	V1.1	1
	B148-0515-00	2.53.00171001	171A lock	V1.1	1

9.10 Speaker Assembly

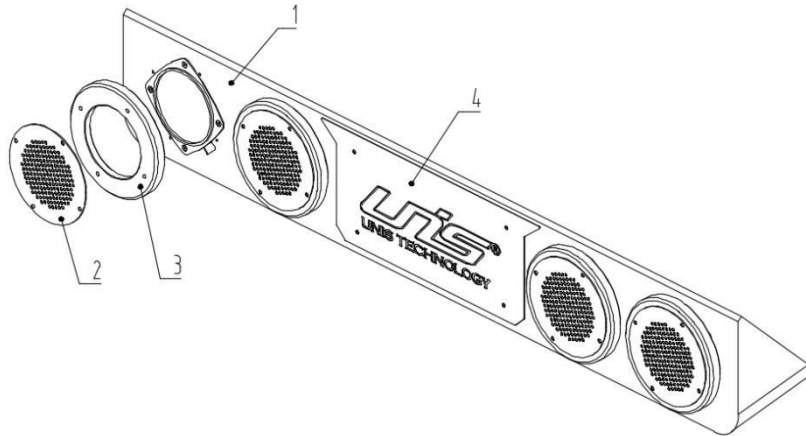


No.	Part No.	Code No.	Name	Version	Qty
1	B148-1101-00	202.4.2003.081	Speaker bracket	V1.1	1
2	B148-1102-00	202.4.2003.082	Speaker net	V1.1	4
3	B148-1103-00	206.4.2003.042	Speaker light plastic	V1.1	4
4	B148-1104-00	202.4.2003.083	Unis plate	V1.1	1

9.11 Cabinet Bottom Electrical Assembly

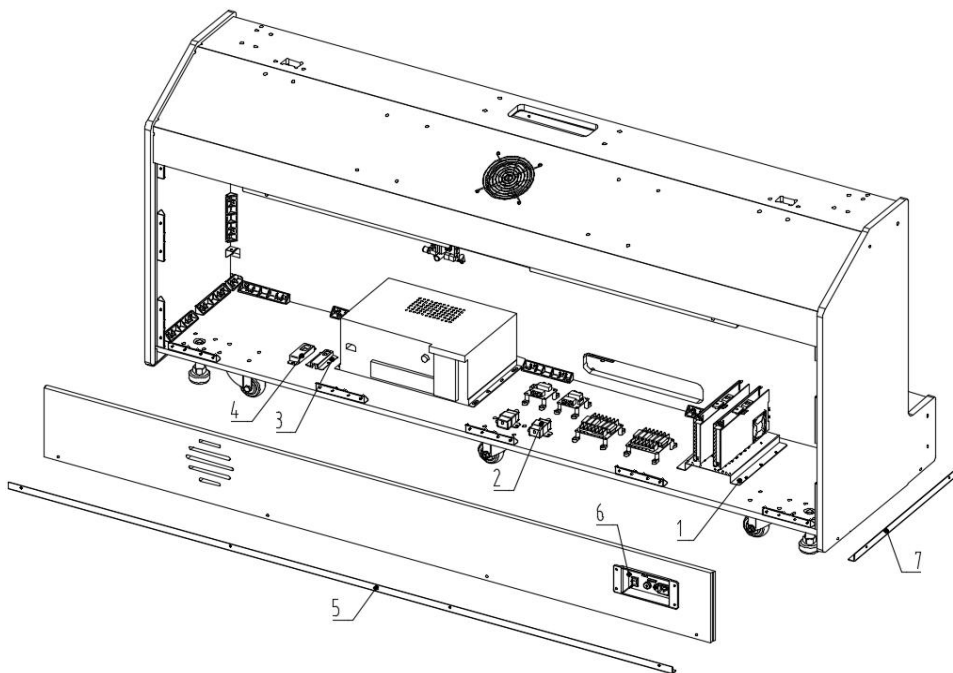


No.	Part No.	Code No.	Name	Version	Qty
1	B148-1201-00	2.60.00001000D	Power supply plate	V1.1	1
2	B148-1202-00	202.1.1707.041	Small pressing plate	V1.1	2
3	B148-1203-00	2.60.00055000	Dongle plate	V1.1	1
4	B148-1204-00	2.60.00064000	Recovery plate	V1.1	1
5	B148-1205-00	202.4.2003.084	Back protect plate	V1.1	1
6	B148-1206-00	2.60.00042000B	Wiring box	V1.1	1
7	B148-1210-00	202.4.2003.085	Side protect plate	V1.1	2


9.12 Decals

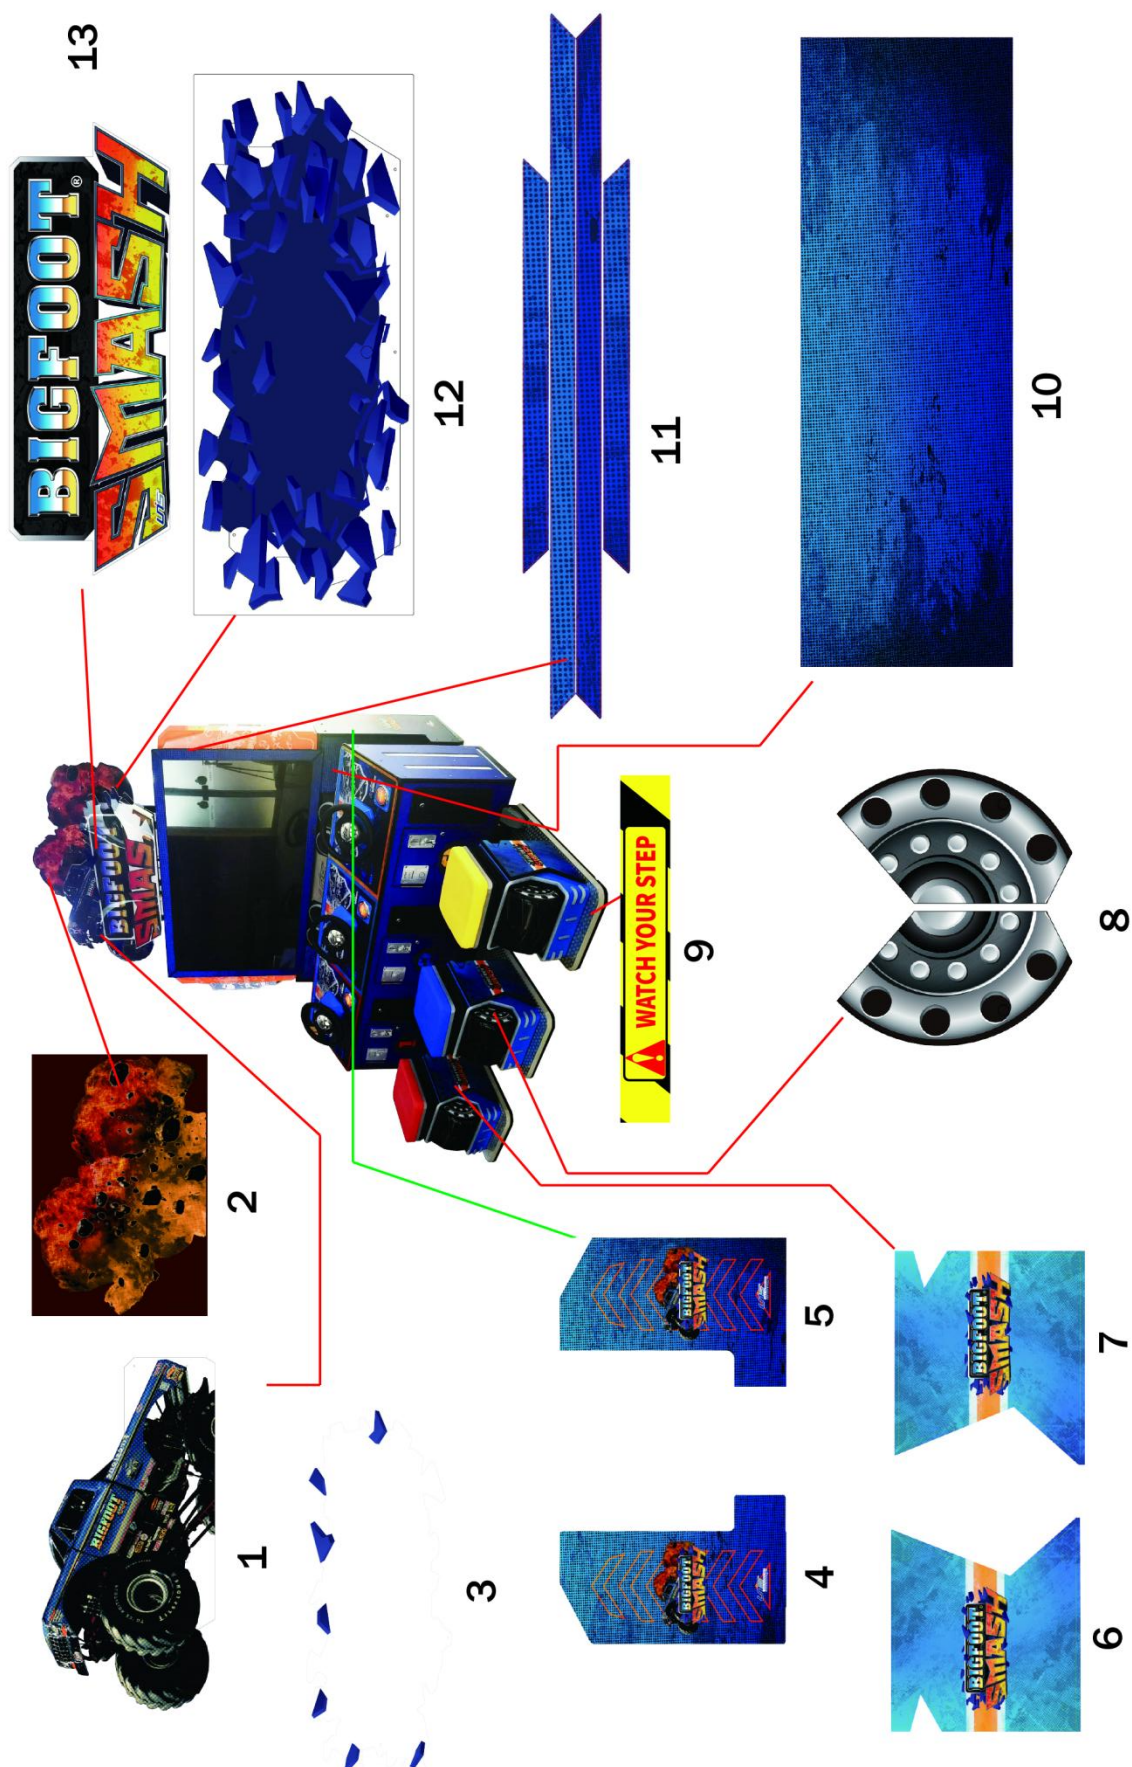


No.	Part No.	Code No.	Name	Version	Qty
1	B148-0808-00	205.4.2410.003	Track Andy board	V1.1	1
2	B148-0809-00	205.4.2410.004	Fire Andy board	V1.1	1
3	B148-0807-00	205.4.2410.005	Dirt front PET	V1.1	1
4	B148-1421-00	205.4.2410.018	Monitor L side OVC	V1.1	1
5	B148-1420-00	205.4.2410.017	Monitor R side OVC	V1.1	1
6	B148-1423-00	205.4.2410.020	Seat L side PVC	V1.1	1
7	B148-1422-00	205.4.2410.019	Seat R side PVC	V1.1	1

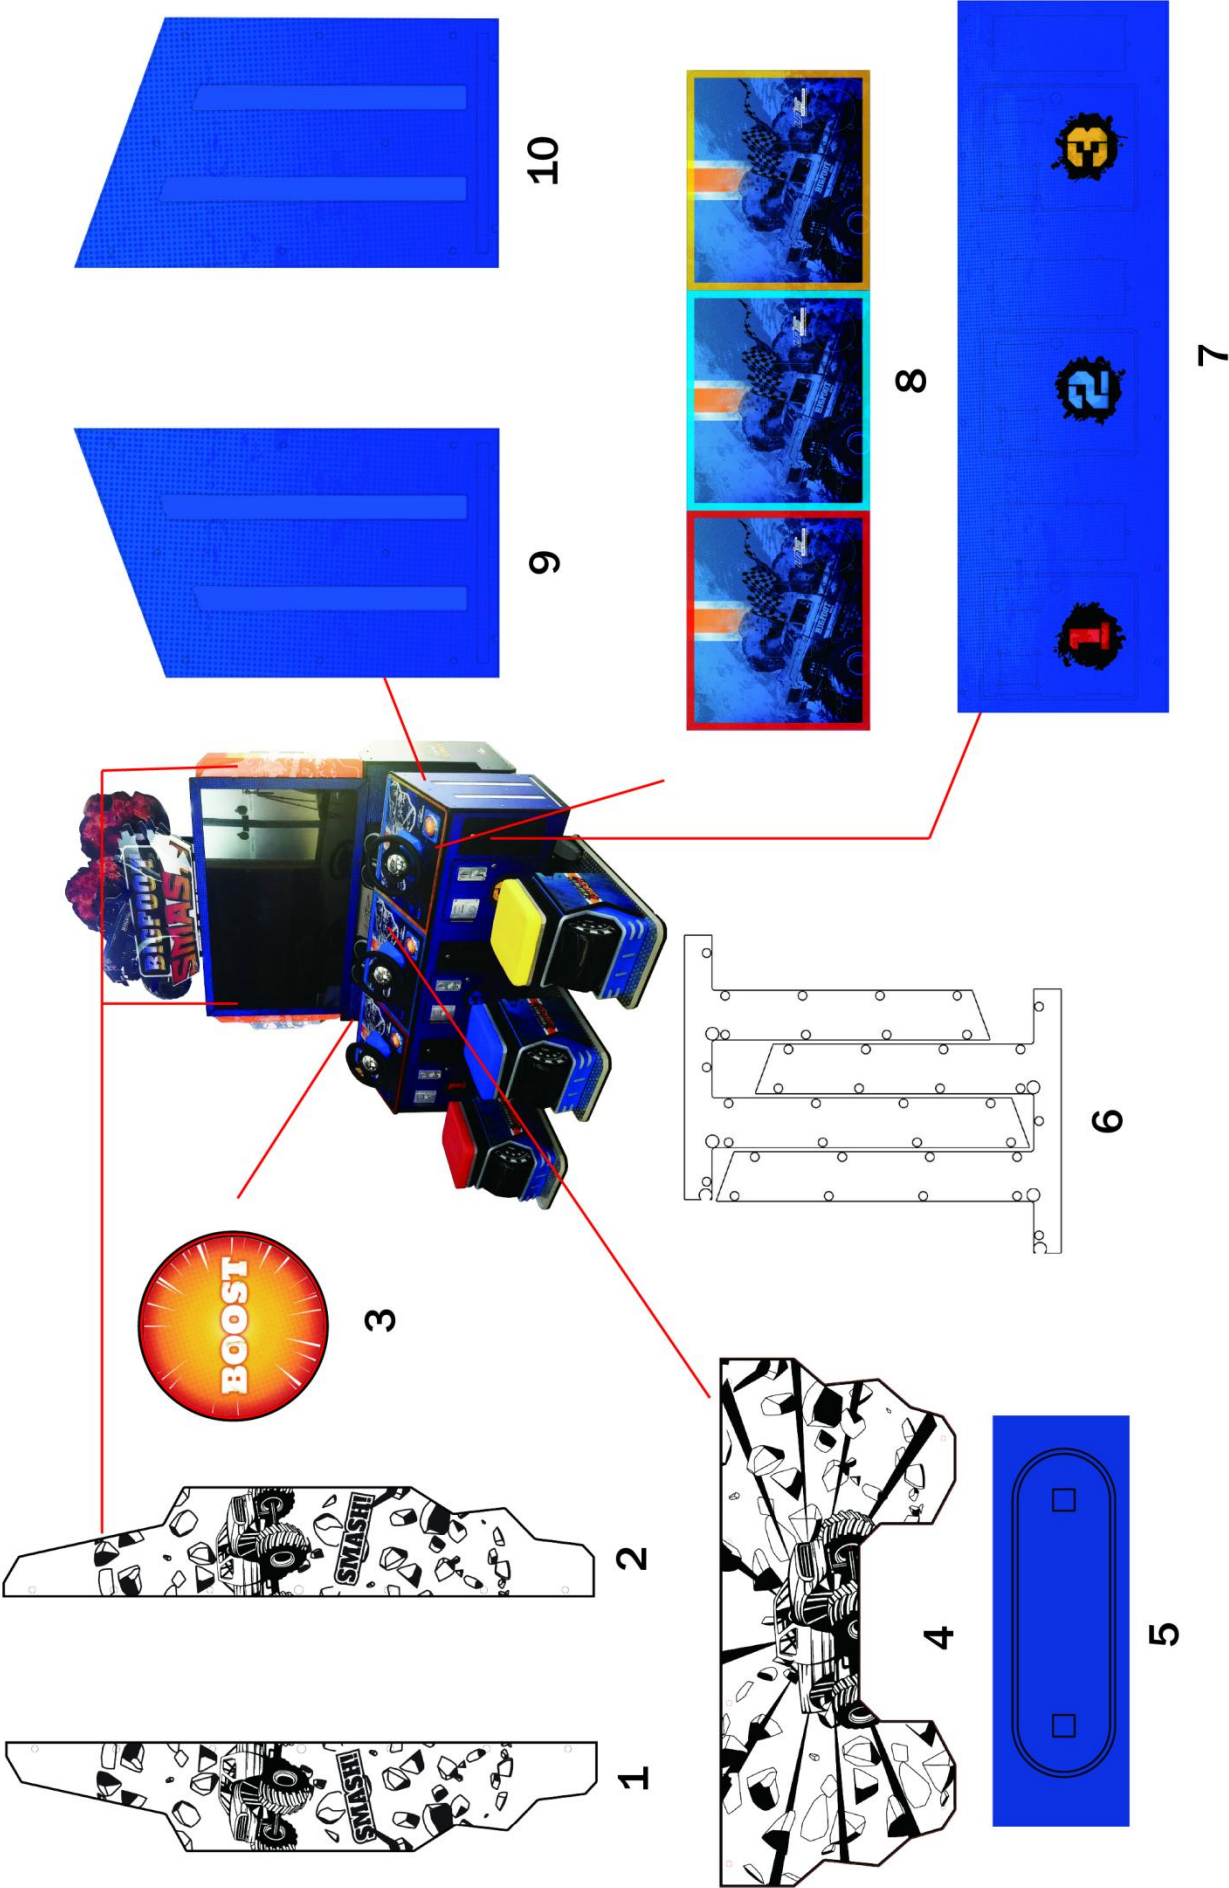

No.	Part No.	Code No.	Name	Version	Qty
1	B148-0702-00	206.4.2003.061	L light plastic	V1.1	1
2	B148-0709-00	206.4.2003.062	R light plastic	V1.1	1
3	B148-1426-00	205.4.2410.023	Button PVC	V1.1	1
4	B148-0610-00	206.4.2003.064	Panel decoration plastic	V1.1	3
5	B148-0616-00	205.4.2410.024	Card reader cover PVC	V1.1	3
6	B148-1418-00	205.4.2410.015	Side base board PVC	V1.1	1
7	B148-1427-00	205.4.2410.025	Panel front PVC	V1.1	1
8	B148-1417-00	205.4.2410.014	Panel PVC	V1.1	1
9	B148-1429-00	205.4.2410.027	Panel L side PVC	V1.1	1
10	B148-1428-00	205.4.2410.026	Panel R side PVC	V1.1	1

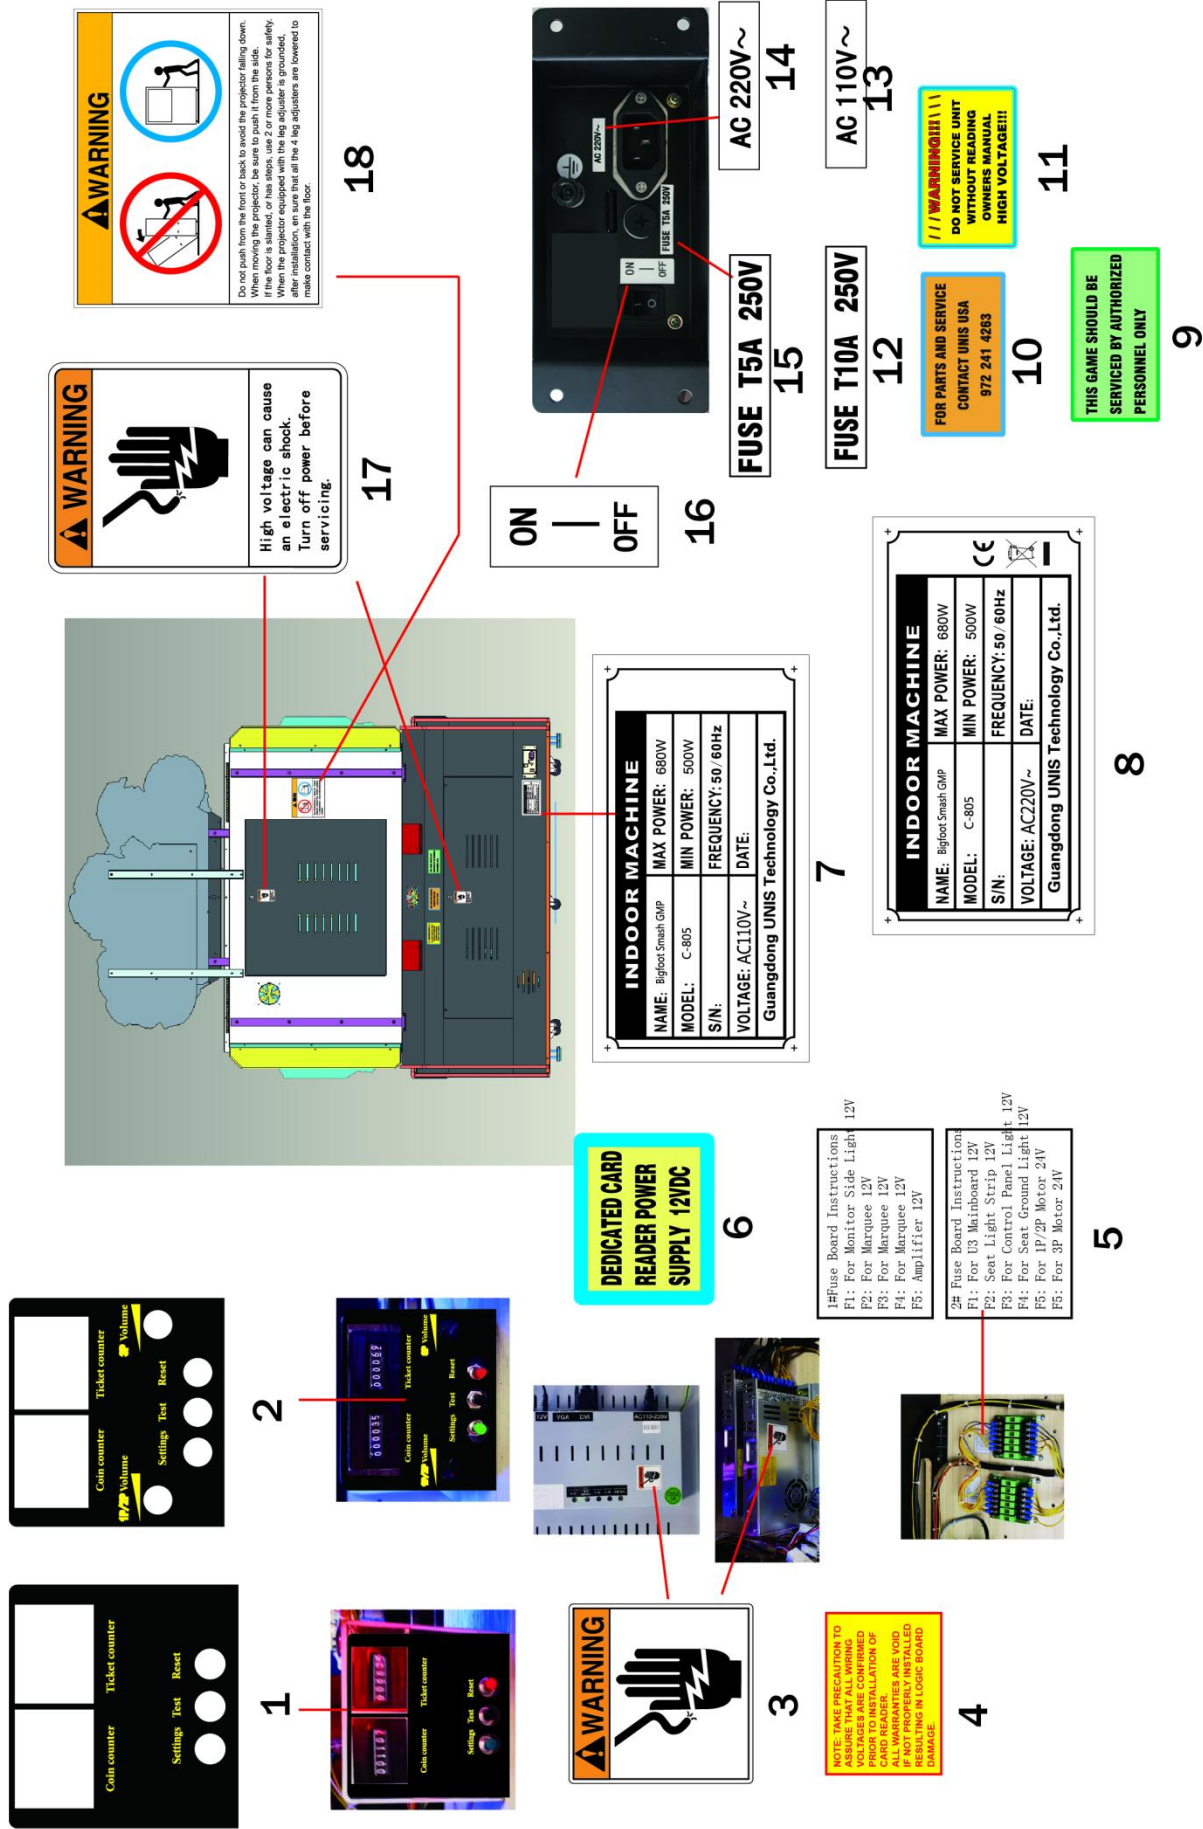


No.	Part No.	Code No.	Name	Version	Qty
1	B148-1435-00	205.4.2410.034	1P&3P counter decal	V1.1	2
2	B148-1436-00	205.4.2410.035	2P counter decal	V1.1	1
3	B148-1402-00	2.56.00.000036	High voltage label(s)	V1.1	3
4	B148-1415-00	2.56.00.000120	AAMA label	V1.1	3
5	B148-1437-00	205.4.2410.036	Fuse board decal	V1.1	1
6	B148-1416-00	2.56.00.000121	Adapter decal	V1.1	1
7	B148-1432-00	205.4.2410.031	110V nameplate	V1.1	1
8	B148-1433-00	205.4.2410.032	220V nameplate	V1.1	1
9	B148-1404-00	2.56.00.000042A	Green maintenance decal	V1.1	1
10	B148-1412-00	2.56.00.000095A	Orange maintenance	V1.1	1
11	B148-1405-00	2.56.00.000067A	Yellow maintenance decal	V1.1	1
12	B148-1410-00	2.56.00.000077	Fuse(T10A) label	V1.1	1
13	B148-1407-00	2.56.00.000071	110V label	V1.1	1
14	B148-1408-00	2.56.00.000072	220V label	V1.1	1
15	B148-1409-00	2.56.00.000074	Fuse label	V1.1	1
16	B148-1401-00	2.56.00.000016	Power SW decal	V1.1	1
17	B148-1403-00	2.56.00.000037	High voltage label(I)	V1.1	2
18	B148-1406-00	2.56.00.000060	Pushing warning decal	V1.1	1












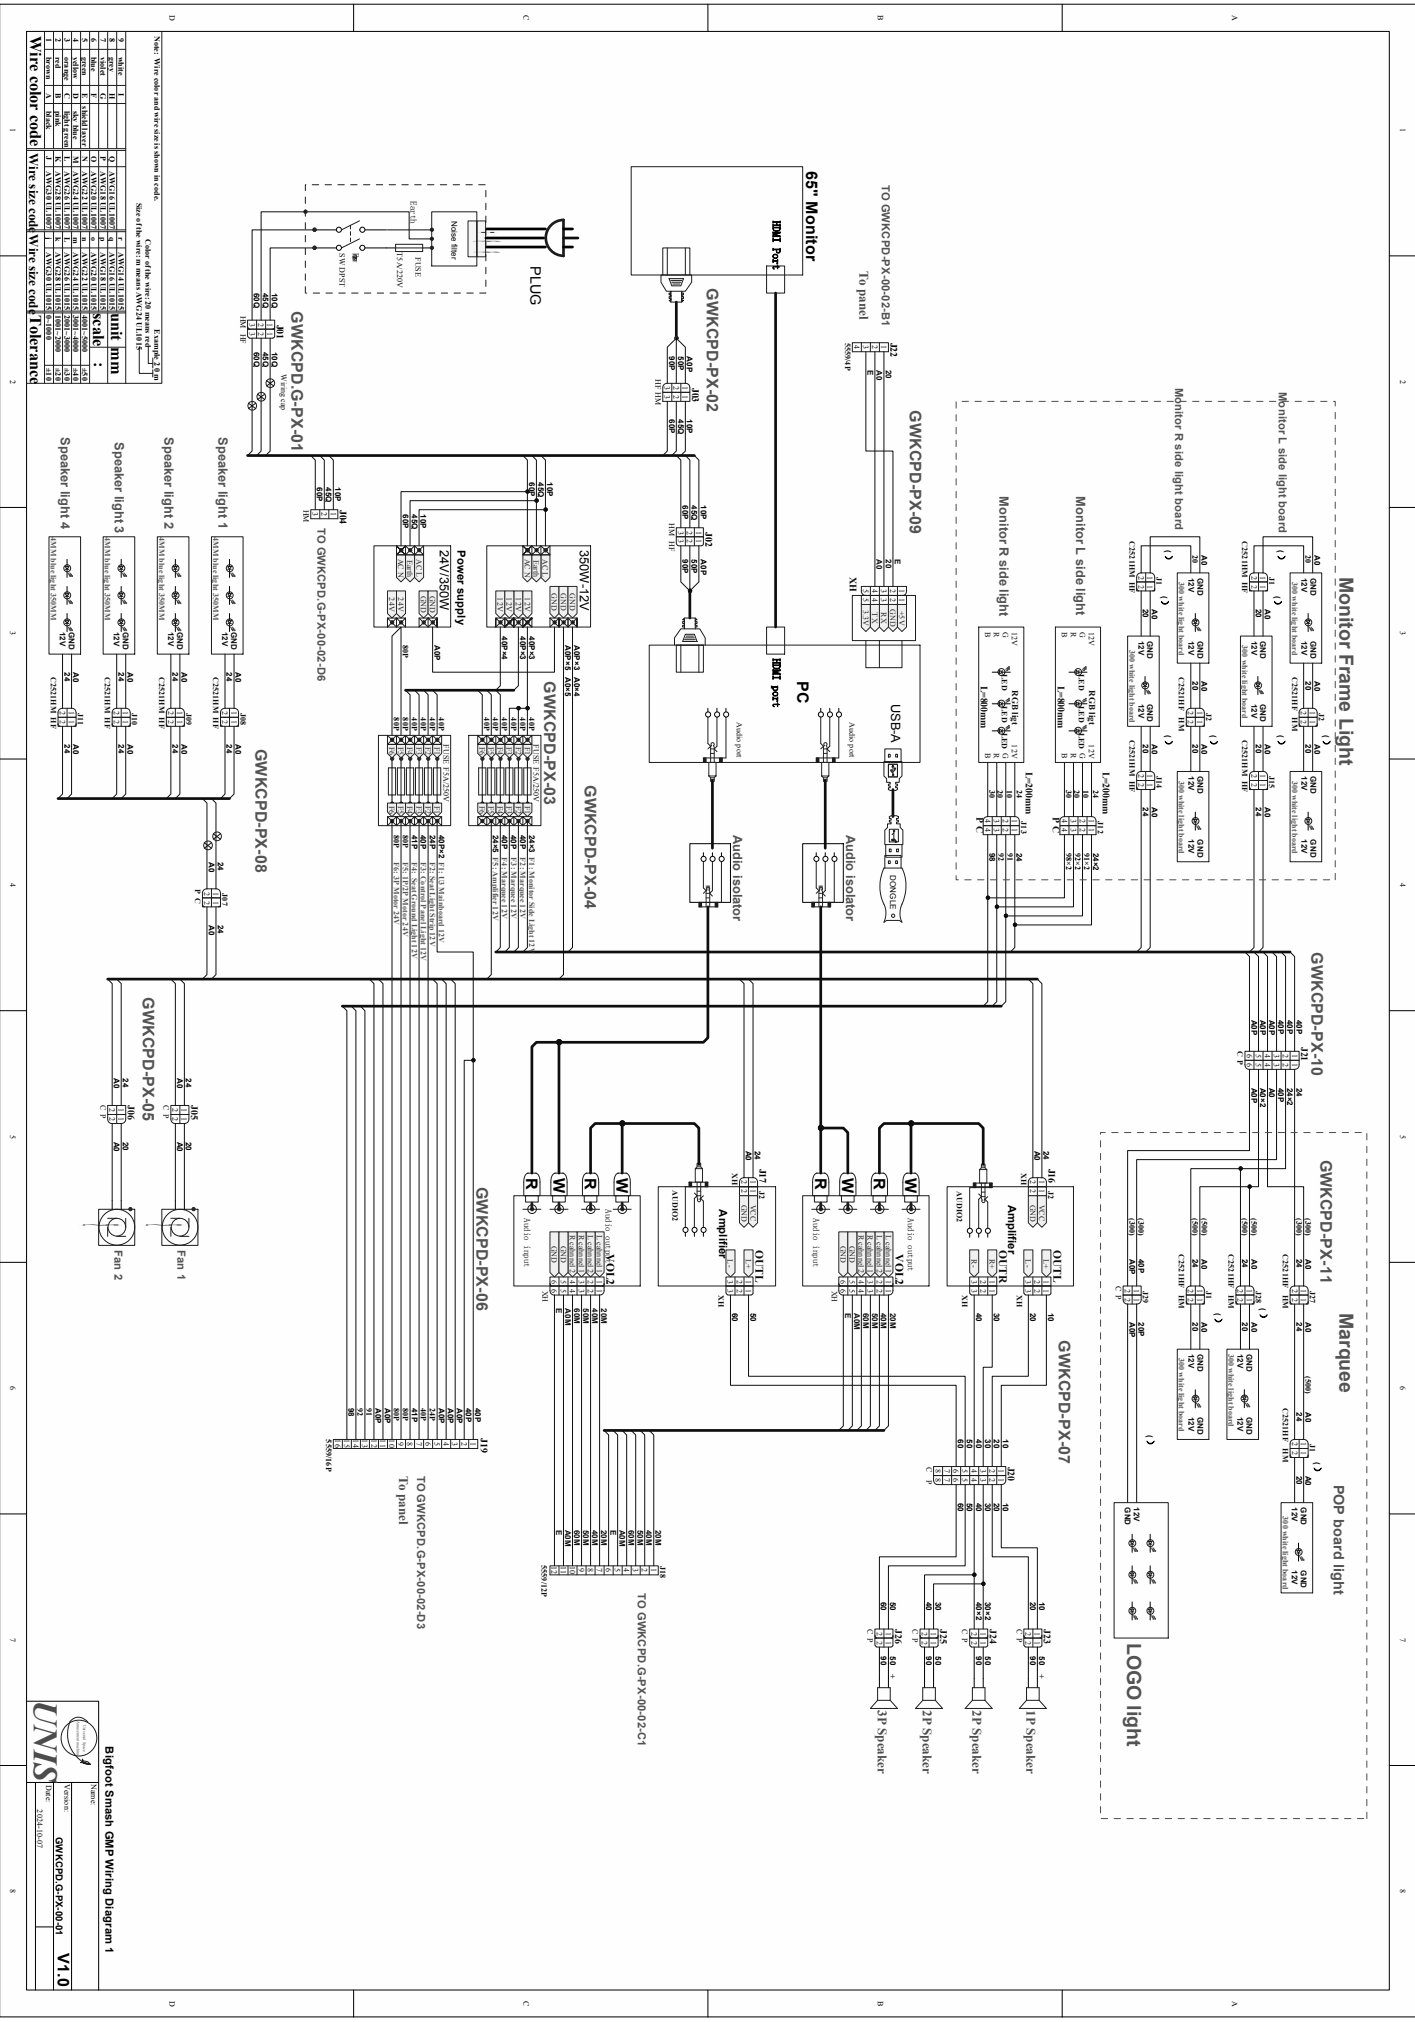


Wire color code and wire size code

Example: 2.0mm

Wire color code	Wire size code	Wire size code
1	2.0mm	2.0mm
2	2.0mm	2.0mm
3	2.0mm	2.0mm
4	2.0mm	2.0mm
5	2.0mm	2.0mm
6	2.0mm	2.0mm
7	2.0mm	2.0mm
8	2.0mm	2.0mm
9	2.0mm	2.0mm
10	2.0mm	2.0mm
11	2.0mm	2.0mm
12	2.0mm	2.0mm
13	2.0mm	2.0mm
14	2.0mm	2.0mm
15	2.0mm	2.0mm
16	2.0mm	2.0mm
17	2.0mm	2.0mm
18	2.0mm	2.0mm
19	2.0mm	2.0mm
20	2.0mm	2.0mm
21	2.0mm	2.0mm
22	2.0mm	2.0mm
23	2.0mm	2.0mm
24	2.0mm	2.0mm
25	2.0mm	2.0mm
26	2.0mm	2.0mm
27	2.0mm	2.0mm
28	2.0mm	2.0mm
29	2.0mm	2.0mm
30	2.0mm	2.0mm
31	2.0mm	2.0mm
32	2.0mm	2.0mm
33	2.0mm	2.0mm
34	2.0mm	2.0mm
35	2.0mm	2.0mm
36	2.0mm	2.0mm
37	2.0mm	2.0mm
38	2.0mm	2.0mm
39	2.0mm	2.0mm
40	2.0mm	2.0mm
41	2.0mm	2.0mm
42	2.0mm	2.0mm
43	2.0mm	2.0mm
44	2.0mm	2.0mm
45	2.0mm	2.0mm
46	2.0mm	2.0mm
47	2.0mm	2.0mm
48	2.0mm	2.0mm
49	2.0mm	2.0mm
50	2.0mm	2.0mm
51	2.0mm	2.0mm
52	2.0mm	2.0mm
53	2.0mm	2.0mm
54	2.0mm	2.0mm
55	2.0mm	2.0mm
56	2.0mm	2.0mm
57	2.0mm	2.0mm
58	2.0mm	2.0mm
59	2.0mm	2.0mm
60	2.0mm	2.0mm
61	2.0mm	2.0mm
62	2.0mm	2.0mm
63	2.0mm	2.0mm
64	2.0mm	2.0mm
65	2.0mm	2.0mm
66	2.0mm	2.0mm
67	2.0mm	2.0mm
68	2.0mm	2.0mm
69	2.0mm	2.0mm
70	2.0mm	2.0mm
71	2.0mm	2.0mm
72	2.0mm	2.0mm
73	2.0mm	2.0mm
74	2.0mm	2.0mm
75	2.0mm	2.0mm
76	2.0mm	2.0mm
77	2.0mm	2.0mm
78	2.0mm	2.0mm
79	2.0mm	2.0mm
80	2.0mm	2.0mm
81	2.0mm	2.0mm
82	2.0mm	2.0mm
83	2.0mm	2.0mm
84	2.0mm	2.0mm
85	2.0mm	2.0mm
86	2.0mm	2.0mm
87	2.0mm	2.0mm
88	2.0mm	2.0mm
89	2.0mm	2.0mm
90	2.0mm	2.0mm
91	2.0mm	2.0mm
92	2.0mm	2.0mm
93	2.0mm	2.0mm
94	2.0mm	2.0mm
95	2.0mm	2.0mm
96	2.0mm	2.0mm
97	2.0mm	2.0mm
98	2.0mm	2.0mm
99	2.0mm	2.0mm
100	2.0mm	2.0mm

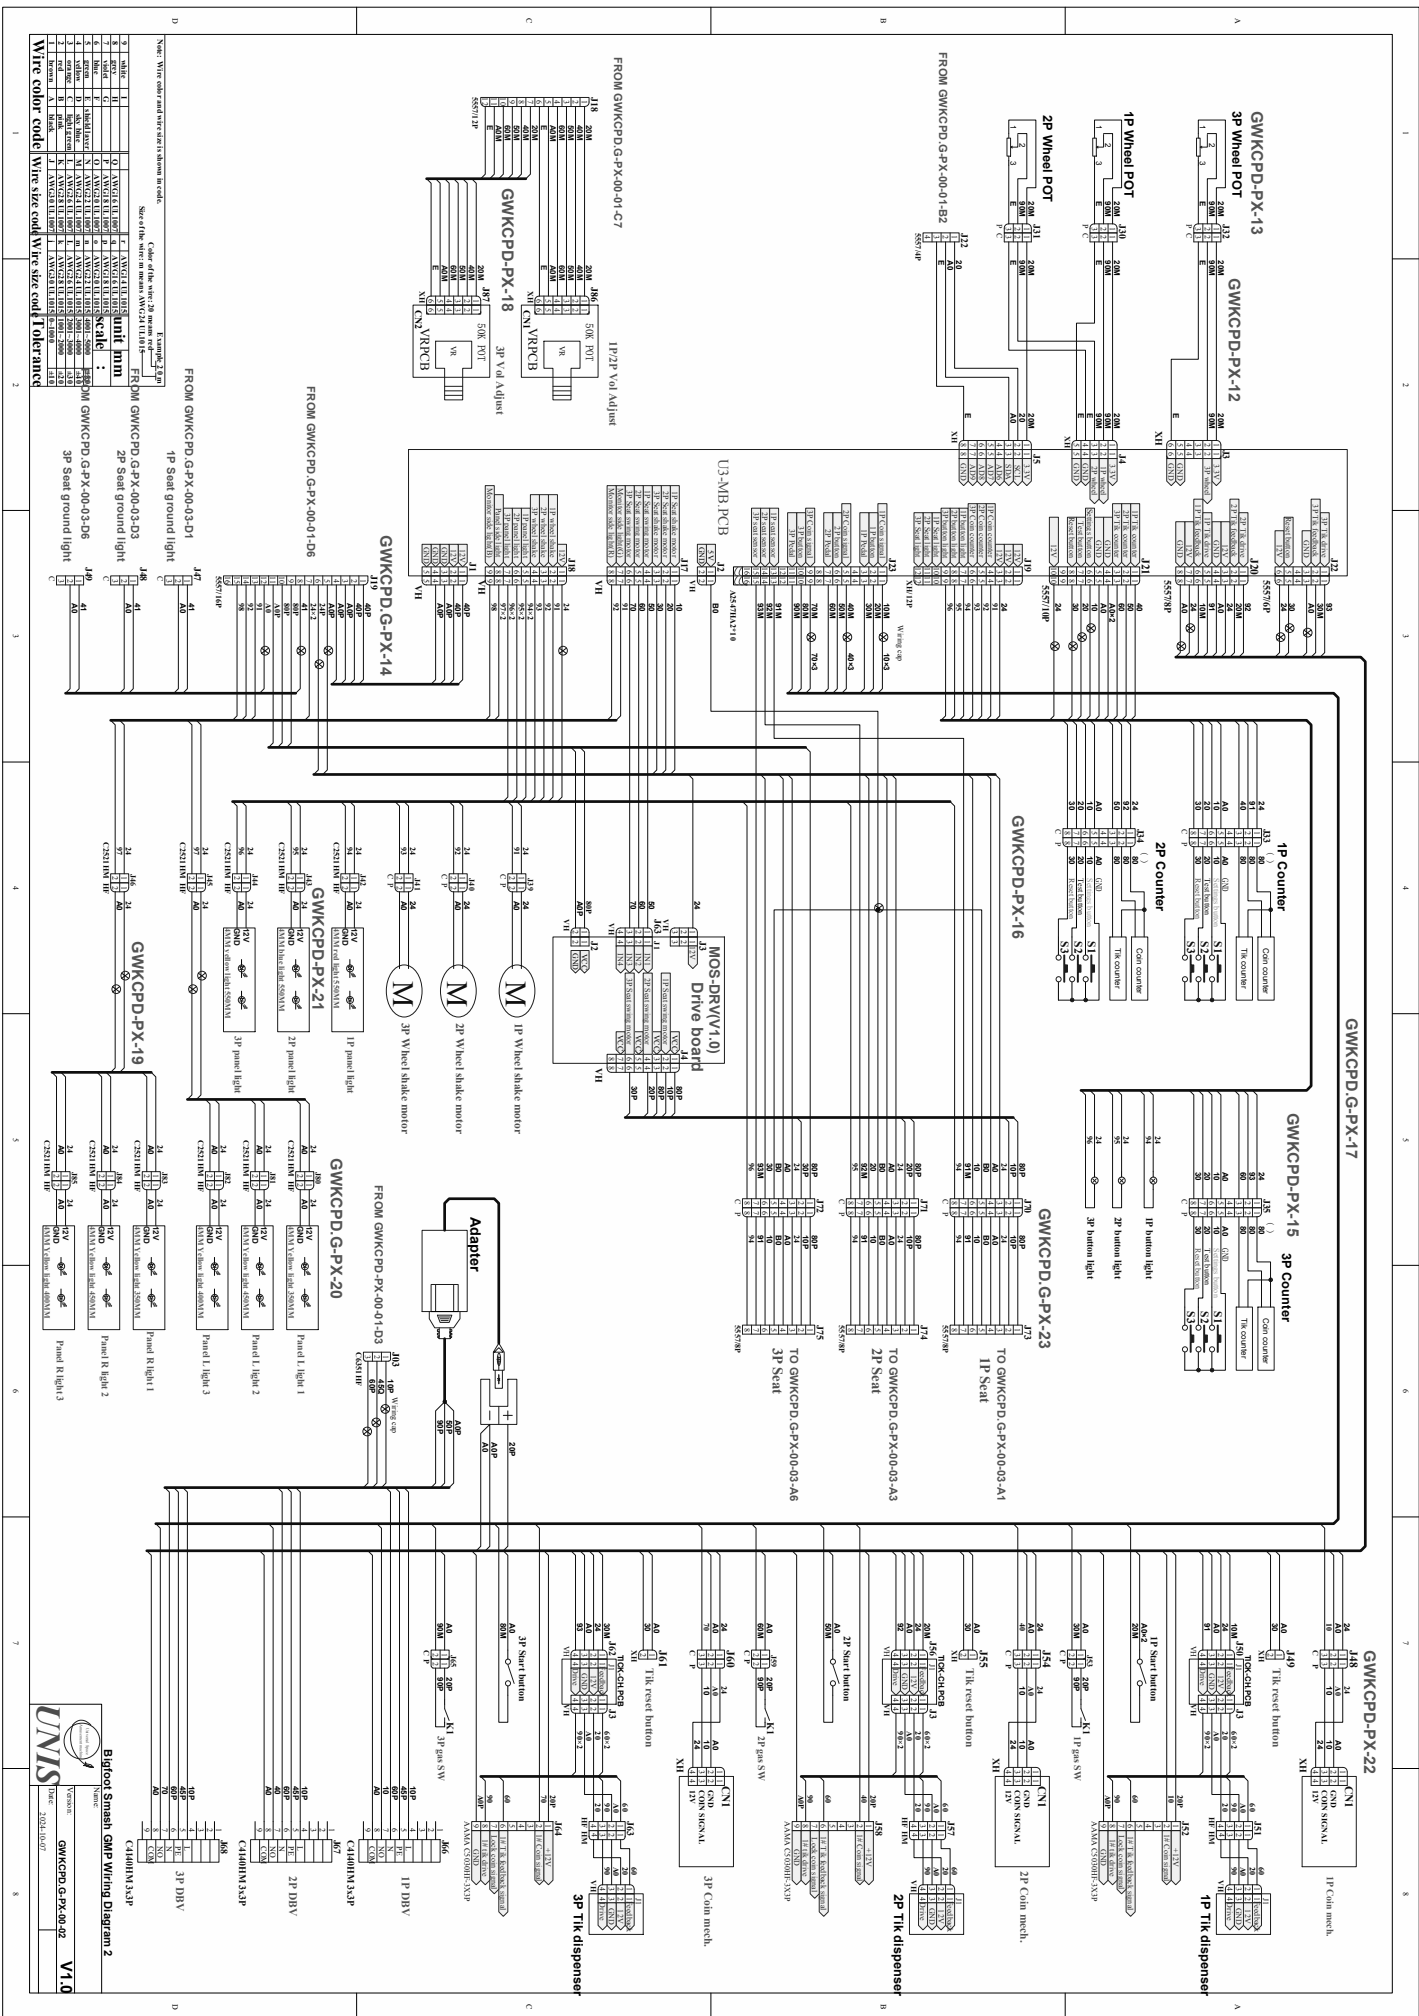

   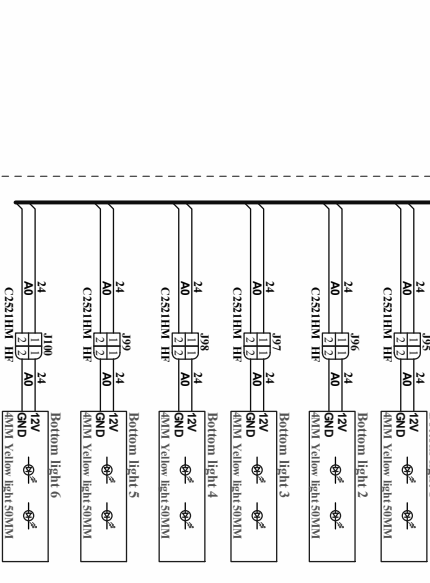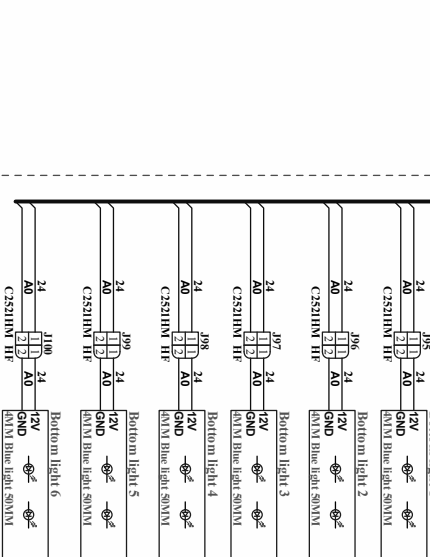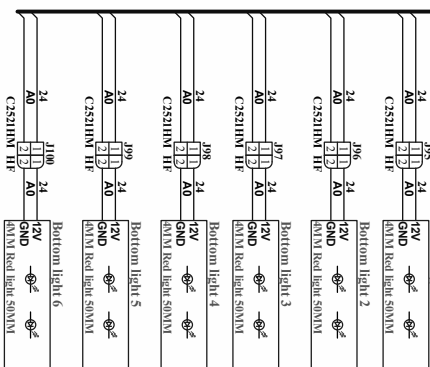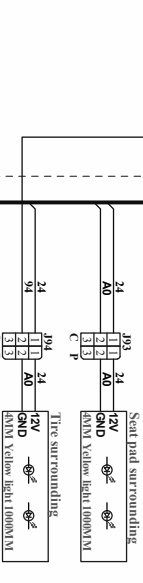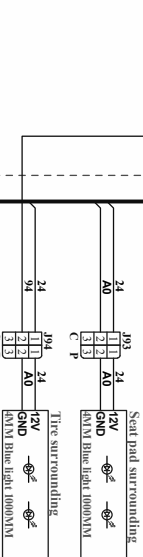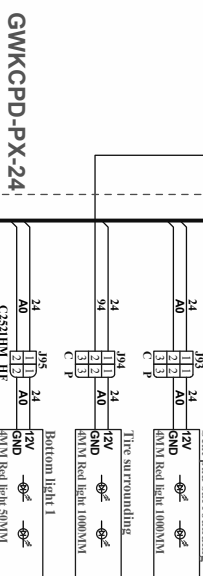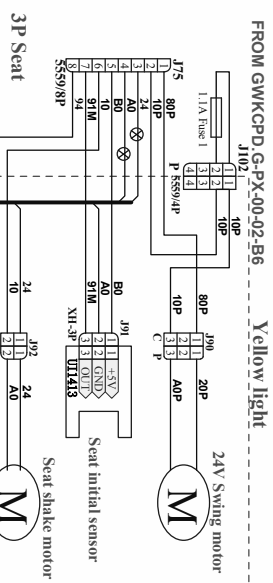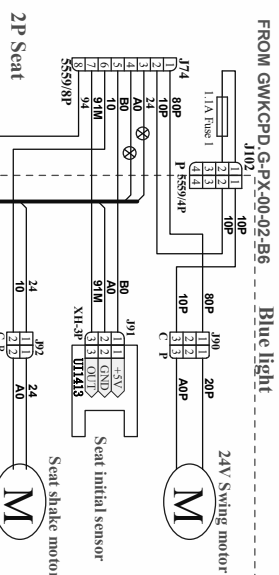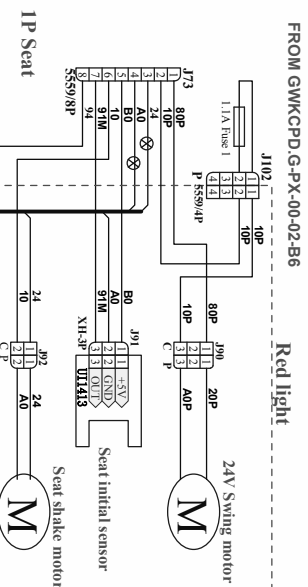

Note: Wire color and wire size is shown in code.

	Example 2.0 m
Color of the wire: 20 means red	—
Size of the wire: m means AWG24 UL1015	—

Example 2.0 m
Color of the wire: 20 means red
the wire: m means AWG24 UL1015

9	white	I		r	AWG14 UL1015	unit	mm
8	grey	H	Q	AWG16 UL1007	q	AWG16 UL1015	
7	violet	G	P	AWG18 UL1007	p	AWG18 UL1015	
6	blue	F	O	AWG20 UL1007	o	AWG20 UL1015	scale
							:

	unit	mm
r	AWG14 UL1015	
q	AWG16 UL1015	
p	AWG18 UL1015	
o	AWG20 UL1015	
	scale	:

Wire color code	Wire size code	Wire size code	Tolerance
5 green	N	AWG22 UL1015	±0.50
4 yellow	M	AWG22 UL1017	±0.50
3 orange	L	AWG26 UL1015	3001-4000
2 red	K	AWG28 UL1015	1001-3000
1 brown	J	AWG30 UL1007	±20%

Wire size code	Tolerances
n	AWG22 UL1015 3001-5000 ±50
m	AWG24 UL1015 3001-4000 ±50
l	AWG26 UL1015 2001-3000 ±50
k	AWG28 UL1015 1001-2000 ±20
j	AWG30 UL1015 0-1000 ±10

Bigfoot Smash GMP Wiring Diagram 3

		(Personal Space) (Maximum of 10 x 10 cm)	
Name:			
Size:	A3	V. nr.:	GWKCPD-G-P-00-03
Date:	2024-10-07		V1.0
Page:			

Size:	A3	Ver.:	V1.0
GWKCPD.G-PX-00-03			
Date:	2024-10-07		
Page:	12		